

GEMAC

USER MANUAL PRELIMINARY

Version: 1.0
Date: 11/03/2024



GEMAC MOTUS® GREENLINE XE DIGITAL

XE6XP360-C

XE6XP360-O

XE6XP360-J

REVISION HISTORY

Date	Revision	Change(s)
11/03/24	1.0	First version

© Copyright 2024 GEMAC Chemnitz GmbH

This document is subject to change without notice.

We constantly work to develop our products further. We reserve any changes in the scope of delivery in shape, equipment, and technology for ourselves. No claims can be made from the details, illustrations, and descriptions in this document. Any kind of duplication, reprocessing, and translation of this document, as well as excerpts from it, require the written permission of GEMAC Chemnitz GmbH. All rights, according to the copyright, remain explicitly reserved for GEMAC Chemnitz GmbH.

Note:

To use the sensor and for proper understanding of this manual, general knowledge of the field bus system CAN-Bus and CANopen, respectively SAE J1939 is required.

Table of contents

preliminary

TABLE OF CONTENTS

1	Safety information	1
1.1	Incoming inspection	1
1.2	Intended use	1
1.3	Incorrect use.....	1
1.4	Requirements for the qualification of personnel.....	1
2	Overview	2
2.1	Characteristics.....	2
2.2	Applications	2
3	Technical Data	3
4	Orientation of the measuring axes	5
5	Mounting.....	6
5.1	Fixation	6
5.2	Arrangement of the fastening holes and position of the system edge	7
6	Connection.....	8
6.1	General connection information	8
6.2	Connector Pin Out	8
6.3	Internal circuit.....	8
6.4	Bus termination resistor.....	8
7	Functional description.....	9
7.1	Low pass filter	9
7.2	Sensor fusion filter	10
7.2.1	Functionality	10
7.2.2	Advanced configuration of the sensor fusion filter	10
7.2.3	Drift compensation of the rotation rate.....	11
8	Functional description CAN interface	12
8.1	Zero Point Adjustment	12
8.2	Digital filter.....	12
8.3	Sensor fusion algorithm	12
8.4	Format of the CAN telegrams	12
8.4.1	Data part in the CAN telegram	12
8.4.2	Status byte (STATUS)	13
8.5	Boot Up Message.....	14

Table of contents

preliminary

8.6	Read/Write device parameters	14
8.6.1	Set Parameter Telegrams	14
8.6.2	Reply Parameter Telegrams	15
8.7	Default Device Parameters	17
8.8	Transfer of the inclination values (perpendicular angle)	17
8.8.1	Polling Mode	17
8.8.2	Synchronous Mode	18
8.8.3	Cyclic Mode	18
8.9	Alternative output values	19
8.9.1	Euler-Angles	19
8.9.2	Angular Rate output (Gyro sensor raw data)	19
8.9.3	Transfer of acceleration values	19
8.10	Configuration of the sensor	20
8.10.1	Configuration of Cyclic Mode	20
8.10.2	Configuration of the CAN Identifier	20
8.10.3	Configuration of the Baud Rate	20
8.10.4	Configure Automatic Bus-Off Recovery	21
8.10.5	Configuration Cut-off frequency of the low pass filter	21
8.10.6	Configuration of sensor fusion	21
8.10.7	Configuration of Zero Point Adjustment	22
8.10.8	Restoration of Default Device Parameters	22
8.10.9	Save Device Parameters	22
8.10.10	Perform a software reset	23
9	Functional description CANopen interface	24
9.1	Overview of function	24
9.2	CANopen structure	24
9.3	CANopen device model	25
9.4	COB-IDs	25
9.5	Network management: NMT	26
9.6	Process data: PDO (TPDO1 - TPDO4)	27
9.6.1	PDO communication types	28
9.6.1.1	Individual Request (Polling)	28
9.6.1.2	Cyclic Transmission	28
9.6.1.3	Synchronous Transmission	28
9.6.1.4	Event-controlled transmission on inclination change (manufacturer specific)	28
9.7	Service data: SDO	29
9.8	Object dictionary	29
9.8.1	Communication parameters (according to CiA DS-301)	30
9.8.1.1	Error register (1001h)	33
9.8.1.2	Manufacturer status register (1002h)	33

Table of contents

preliminary

9.8.1.3	Pre-defined error field (1003h).....	34
9.8.1.4	Saving (1010h) and Loading (1011h) of parameters	34
9.8.1.5	Transmit PDO - Transmission type (1800h / 1801h / 1802h / 1803h)	34
9.8.2	Manufacturer specific part.....	35
9.8.2.1	Automatic Bus-Off Recovery (2002h).....	36
9.8.2.2	Low Pass Filter Settings (3000h)	36
9.8.2.3	TPD01 Transmission on inclination change (3001h).....	37
9.8.2.4	Configuration of the sensor fusion (3002h)	37
9.8.3	Device profile specific part (according to CiA DS-410)	37
9.8.3.1	Resolution (6000h).....	38
9.8.3.2	Inclination values axial (6010h) / Inclination values longitudinal and lateral (6010h and 6020h)	38
9.8.3.3	Operating parameters (6011h and 6021h).....	38
9.8.3.4	Zero point adjustment for perpendicular angles: Preset Value, Offset Value, Differential Offset Value (60x1/2/3h)	39
9.9	Emergency objects	39
9.10	Failure monitoring.....	40
9.10.1	Nodeguarding / Lifeguarding	40
9.10.2	Heartbeat	41
9.11	LSS: Layer Setting Service (according to CiA DSP-305).....	41
9.11.1	Setting of Node-ID and Baud rate	41
9.12	Automatic Baud Rate Detection (according to CiA AN-801)	42
10	Functional description SAE J1939 interface	43
10.1	Telegram format.....	43
10.2	Device name and address.....	43
10.3	Process data (Transmit PGNs).....	44
10.4	PGN Mapping	47
10.5	Sensor configuration.....	48
10.5.1	Examples SAE J1939 communication.....	52
10.5.2	Status byte description.....	52
11	Maintenance and Service	53
11.1	Calibration	53
11.2	Customer service	53
11.2.1	Reshipment.....	53
11.2.2	Support.....	53
11.2.3	Warranty and limitation of liability	53
12	Sensor configuration.....	54
12.1	Inclination sensor programming adapter.....	54

Table of contents

preliminary

12.2	PC software ISDControl	54
13	Ordering informationen	56

LIST OF TABLES

Table 1: Technical Data	4
Table 2: M12 Plug Connector Pin Out CAN Bus	8
Table 3: Filter selection low pass filter	9
Table 4: Filter selection fusion filter	10
Table 5: Extended configuration of the sensor fusion	11
Table 6: Format of the CAN telegrams	12
Table 7: Status byte	13
Table 8: Boot Up Message	14
Table 9: Supported FSC and Parameters of the Set Parameter Telegrams (Request)	15
Table 10: Function Codes and Parameters of the Reply Parameter Telegrams	17
Table 11: Device parameters default settings.....	17
Table 12: Request telegram: inclination values (FSC = 00h)	17
Table 13: Reply telegram: inclination values (FSC = 00h)	18
Table 14: Telegrams in cyclic mode	19
Table 15: CAN Identifier	20
Table 16: Restore Default Device Parameters	22
Table 17: Save Device Parameters.....	22
Table 18: Perform a software reset	23
Table 19: Calculation of the COB-IDs for Pre-defined Connection Set	26
Table 20: TPDO1 default mapping.....	27
Table 21: TPDO2 default mapping	27
Table 22: TPDO3 default mapping	27
Table 23: TPDO4 default mapping	27
Table 24: Mappable objects.....	28
Table 25: Communication Parameters in the Object Dictionary	33
Table 26: Error register (1001h).....	33
Table 27: Manufacturer status register (1002h)	34
Table 28: Error entry in pre-defined error field (1003h)	34
Table 29: Transmit PDO - Transmission type.....	35
Table 30: Manufacturer Specific part of the object dictionary.....	36
Table 31: Filter selection	37
Table 32: Device profile specific part of the object dictionary	38
Table 33: Operating parameters (6011h and 6021h)	38
Table 34: Zero point adjustment	39
Table 35: Emergency object	39
Table 36: Emergency error codes.....	40
Table 37: Emergency: Manufacturer specific error field	40
Table 38: LSS Baud rate index according to CiA DSP-305	41
Table 39: Transmit PGN 1 - 61459 Slope Sensor Information.....	45
Table 40: Transmit PGN 2 - 61481 Slope Sensor Information 2	45

List of tables

preliminary

Table 41: Transmit PGN 3 - 61482 Angular Rate Information	45
Table 42: Transmit PGN 4 - 61485 Acceleration Sensor	46
Table 43: Transmit PGN 5 - Perpendicular angle	46
Table 44: Transmit PGN 6 - Euler angles	46
Table 45: Transmit PGN 8 - Acceleration	46
Table 46: Transmit PGN 9 - Angular rate	47
Table 47: Transmit PGN 10 - Unfiltered acceleration	47
Table 48: Transmit PGN 11 - Gyro angle	47
Table 49: Status Bits in the PGN.....	47
Table 50: SAE J1939 proprietary B mapping signals.....	48
Table 51: Configuration parameters	51
Table 52: Read the firmware version of the sensor (device address 128)	52
Table 53: Activate sensor fusion (device address 128)	52
Table 54: Status byte	52
Table 55: Ordering information	56

LIST OF FIGURES

Figure 1: Standard orientation for perpendicular angles, sensor with 4 mounting holes.....	5
Figure 2: Orientation for Euler-Angles, sensor with 2 mounting holes	5
Figure 3: Acceleration.....	5
Figure 4: Rotation rate.....	5
Figure 5: Mounting holes 4-hole variant (dimensions in mm).....	6
Figure 6: Arrangement of the fastening holes and position of the system edge.....	7
Figure 7: internal circuit	8
Figure 8: Impulse response of the two low pass filters	9
Figure 9: Amplitude response of the two low pass filters	10
Figure 10: Operational Principle of the Cyclic Mode	18
Figure 11: CANopen structure	25
Figure 12: NMT state diagram	26
Figure 13: SDO Protocol - Access to Object Dictionary	29
Figure 14: SAE J1939 CAN-Identifier	43
Figure 15: Sensor programming adapter	54
Figure 16: PC software.....	55

1 Safety information

1.1 Incoming inspection

Unpack the device immediately after you received it and check the entire delivery for completeness. If transport damage is to be assumed, inform the delivery agent within 72 hours, and keep the packaging for inspection. The device must only be transported in its original or equivalent packaging.

1.2 Intended use

The GEMAC MOTUS® Greenline XE is a device consisting of an electronic sensor and an integrated evaluation unit. The device is designed to determine inclinations in non-road mobile machinery or means of transport for persons or goods like agricultural and forestry machinery, utility vehicles or crane and hoisting technology.

GEMAC Chemnitz GmbH assumes no liability for losses or damages arising from the use of the product, either directly or indirectly. This applies in particular to use of the product that does not conform to this intended purpose and is not described in this document.

1.3 Incorrect use

The GEMAC MOTUS® Greenline XE is not a safety component according to the EU Machinery Regulation (2023/1230). It must not be used in explosion hazardous areas. It is not intended to be used in electronic vehicles with Rechargeable Energy Storage Systems (REESS) charging mode coupled to the power grid. Any use that is not described in section 1.2 „Intended use“ is prohibited. Any use of accessories that is not specifically approved by GEMAC Chemnitz GmbH is at your own risk.

1.4 Requirements for the qualification of personnel

The personnel who work on and with the GEMAC MOTUS® Greenline XE must be suitably authorized, trained, and sufficiently qualified. Skilled personnel refers to the following:

- Has received specialist training, which is backed up by additional knowledge and experience according to operation and service of the sensor and the respective application.
- Knows the relevant technical terms and regulations.
- Can appraise the work assigned to them, recognize potential hazards, and take suitable safety precautions.

2 Overview

2.1 Characteristics

- 6 axial inertial measurement unit with accelerometer and gyroscope
- Dynamic inclination sensor
 - Accuracy independent of the local gravity field through 3D measurement
- Easy to handle parametrization with GEMAC programming tools
 - Intelligent sensor fusion algorithm, configurable for the application
 - configurable filter for vibration suppression
- High sampling rate and bandwidth
- High resolution (0.01°)
- High static accuracy independent of sensors orientation up to $\pm 0.5^\circ$
 - Specification including compensated cross sensitivity
- Dynamic accuracy model-dependent up to $\pm 0.8^\circ$
 - Specification including compensated cross sensitivity
- Comfortable CAN, CANopen or SAE J1939 interface
 - Baud rates from 10 kBit/s to 1 MBit/s
 - Automatic baud rate detection
- UV-resistant, impact-resistant plastic housing
- Wide input voltage range (7.5 - 36 V)
- Low power consumption
- Suitable for industrial use:
 - Working temperature range: -40 °C to +80 °C
 - Degree of protection: IP6K6K and IP6K7

The sensor is factory calibrated in all measuring axes to ensure high accuracy.

The compact and robust design makes the sensors a suitable angle measurement device in rough surroundings for different applications in industry and vehicle technology. Occurring accelerations caused by e.g. brake applications or cornering events are reliable filtered by an integrated fusion algorithm.

A simple configuration and putting into operation is possible by the digital interface.

2.2 Applications

- Agricultural and forestry machinery
- Construction machinery
- Crane and hoisting technology

3 Technical Data

General parameters inclination sensor ¹					
Measurement range	$\pm 90^\circ$ (perpendicular angle) or $\pm 180^\circ$ (roll angle) ²				
Resolution	0.01°				
Static accuracy (including cross sensitivity)	$\pm 0.5^\circ$				
Dynamische Genauigkeit (inklusive Querempfindlichkeit)	typ $\pm 0.8^\circ$				
Dynamic accuracy (including cross sensitivity)	100 - 10000 ms				
Duration of suppression of external accelerations (configurable)	typ. $\pm 0.02^\circ/K$				
General parameters IMU	Acceleration sensor	Angular rate sensor			
Measurement range	$\pm 2\text{ g}$	$\pm 250^\circ/\text{s}$			
Resolution	0.488 mg	0.035 °/s			
In run bias stability	-	typ. 10 °/h			
Angular random walk (ARW)	-	0.4°/√h			
Temperature coefficient (zero point)	typ. 0.4 mg/K	typ. 0.02 °/s/K			
General parameters					
Sampling rate	200 Hz				
Operating temperature	-40 °C to +80 °C				
Characteristics					
Current interface	XE6xP360-C	XE6xP360-O	XE6xP360-J		
	CAN 2.0 A and B (11- and 29-Bit-ID) according to ISO 11898-2	CANopen according to CiA DS-301, Device profile CiA DSP-410	SAE J1939		
Data rates	10k, 20k, 50k, 100k, 125k, 250k, 500k, 800k Bit/s, 1 MBit/s automatic detection		125k, 250k Bit/s automatic detection		
Functions	Angle request, cyclical and synchronized outputs, parametrization, sensor fusion algorithm, digital filter (critically damped (default) or Butterworth lowpass, 8th order), configuration via digital interface				
Electrical parameters					
Supply voltage	11 ... 30 VDC				
Current consumption	approx. 12 mA @ 24 V				
Mechanical parameters					
Connection	approx. 0.2 m cable with sensor connector 5-pole M12 (male)				
Degree of protection	IP6K6K / IP6K7				
Dimensions / Weight	4-hole variant: 62 x 32.3 x 18.7 mm (without cable) / approx. 30 g without cable 2-hole variant: 43.5 x 76.3 x 18.7 mm (without cable) / approx. 30 g without cable				

¹ All indicated angle accuracies are valid after a running time of 10 minutes at 25 °C, absolute calibration accuracy (at 25 °C): $\pm 0.05^\circ$.

² Up to 2 measuring axes with configurable orientation.

3 Technical Data

preliminary

Reliability according EN ISO 13849-1 ³	
MTTF	955 years
MTTFd	1756 years
CE conformity	
European Union harmonisation legislation	
RL 2014/30/EU	Harmonisation of the laws of the Member States relating to electromagnetic compatibility
RL 2011/65/EU	Restriction of the use of certain hazardous substances in electrical and electronic equipment
Harmonised standards	
EN ISO 13766-1:2018 ⁴	Earth-moving machinery and construction machinery - Electromagnetic compatibility of machinery with internal electrical system - Part 1: General EMC requirements under typical EMC environmental conditions (ISO 13766-1:2018)
EN IEC 63000:2018	Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Table 1: Technical Data

³ This product is a standard product and no safety part in accordance with the machinery directive. The calculation is based on an average environment temperature of 40 °C and a usage of 8760 h/a.

⁴ A voltage limitation of the load shedding of 58 V is assumed (see ISO 16750-2:2012 Figure 9).

4 Orientation of the measuring axes

The sensor is delivered with the measuring axes shown in Figure 1.

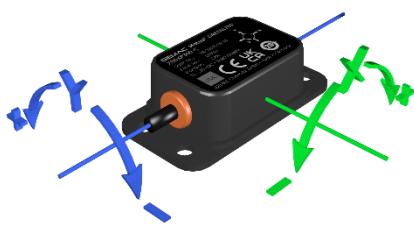


Figure 1: Standard orientation for perpendicular angles, sensor with 4 mounting holes

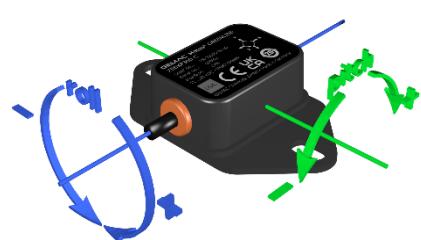


Figure 2: Orientation for Euler-Angles, sensor with 2 mounting holes

The acceleration- and gyro-data are output according to the measurement axes shown in Figure 3 and Figure 4.

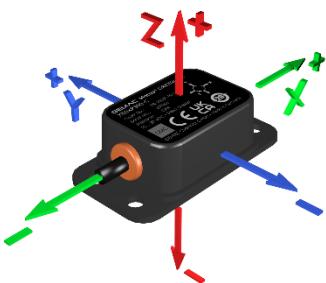


Figure 3: Acceleration

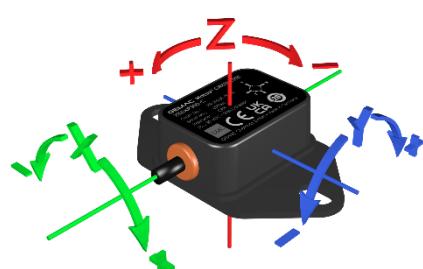


Figure 4: Rotation rate

5 Mounting

5.1 Fixation

A sensor in the 4-hole version (XExXP360-x) must be screwed with four hexagon socket screws M4 according to DIN 912 A2 and four hexagon nuts M4 according to DIN 934. A sensor in the 2-hole variant (XExZP360-x) must be screwed with two hexagon socket screws M5 according to DIN 912 A2 and four hexagon nuts according to DIN 934.

The Sensor with 2 mounting holes has to be screwed in place by using 2 hexagon socket screws M5 according to DIN 912 A2 and 4 hexagon nuts M5 according to DIN 934 with a torque of 3 Nm in a manner, that one full thread of the screw is overlapping minimum.

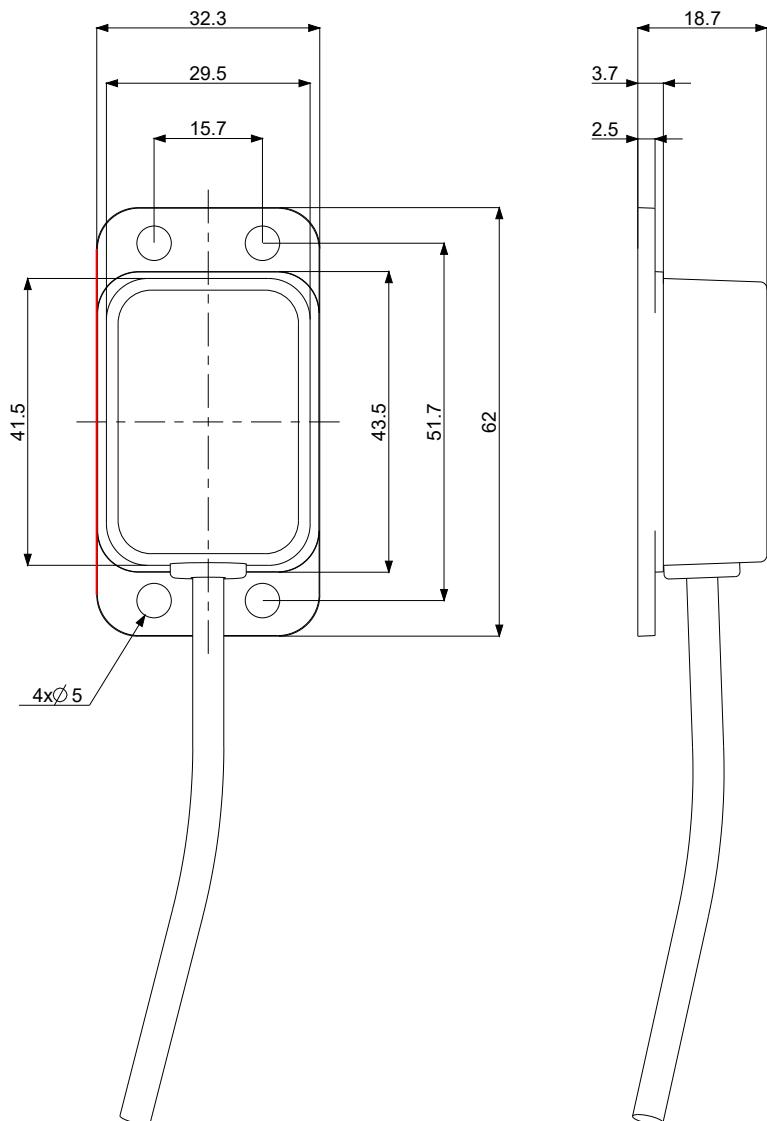


Figure 5: Mounting holes 4-hole variant (dimensions in mm)

5.2 Arrangement of the fastening holes and position of the system edge

The holes for screwing the sensor (Figure 5 and Figure 6) are located in the base plate of the sensor.

The bearing edge is marked in red in the illustrations. The measuring axes of the sensor are aligned parallel or orthogonal to this edge. For more information on the reference edge, see gemac-sensors.com.

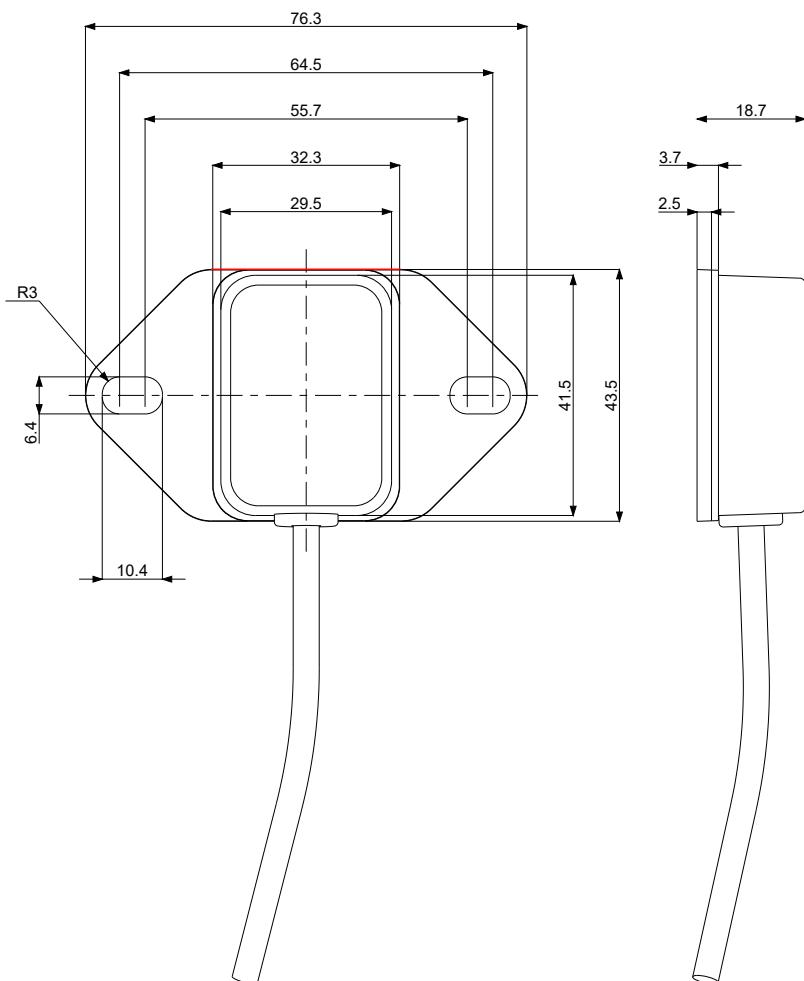


Figure 6: Arrangement of the fastening holes and position of the system edge

6 Connection

6.1 General connection information

The sensor is equipped with a cable with 5-pole round male connector M12 (A-coded) according to IEC 61076-2-101.

A shielded cable must be used. The screen on the power supply must be connected to ground.

6.2 Connector Pin Out

The pin allocation fulfills CiA DR-303-1 (Table 2).

Pin	Signal	Allocation
1	CAN_SHLD	Shield
2	V+	Supply voltage (+24 V)
3	V-	GND / 0 V / V-
4	CAN_H	CAN_H bus line
5	CAN_L	CAN_L bus line

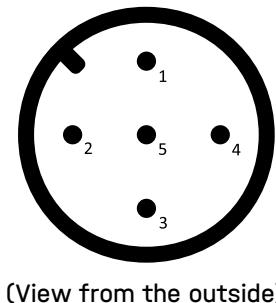


Table 2: M12 Plug Connector Pin Out CAN Bus

6.3 Internal circuit

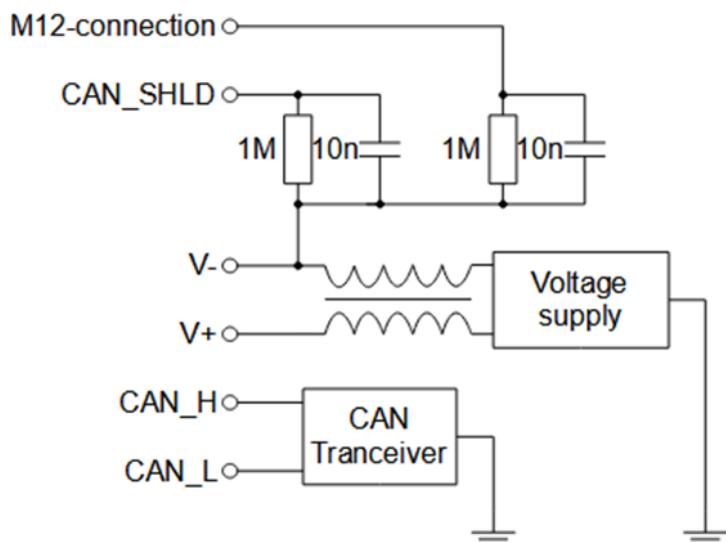


Figure 7: internal circuit

6.4 Bus termination resistor

The sensor does **not** contain an internal termination resistor.

7 Functional description

7.1 Low pass filter

The sensor is based on an indirect measurement of the inclination due to the Earth's gravitational field. External accelerations, such as those caused by vibrations, interfere with the function of the sensor due to their principle.

The sensor offers the possibility of making the continuously generated angular value less sensitive to external, disturbing vibrations. Two low pass filters are available in the sensor, which can be selected according to the sensor's area of application.

With the aid of the parameterizable low pass filters (Butterworth or critically damped) eighth order, parasitic oscillations/vibrations up to 0.1 Hz can be suppressed.

Filter	Adjustable frequency range	Applications
Butterworth	0.1 Hz ... 25 Hz	Static inclination measurement with high damping to vibration
Critically damped	0.1 Hz ... 8 Hz	Inclination measurement in applications that require a certain dynamism, without overshoot at angle changes with good damping

Table 3: Filter selection low pass filter

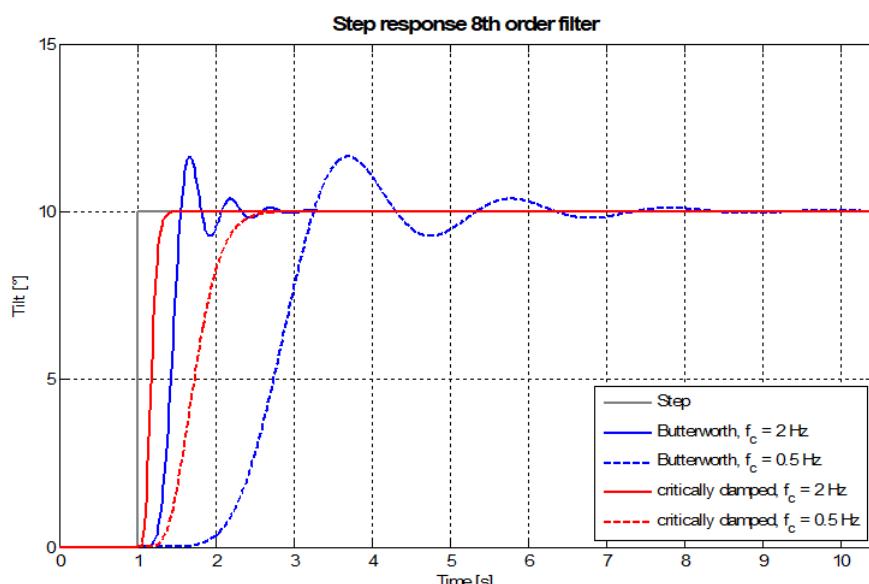


Figure 8: Impulse response of the two low pass filters

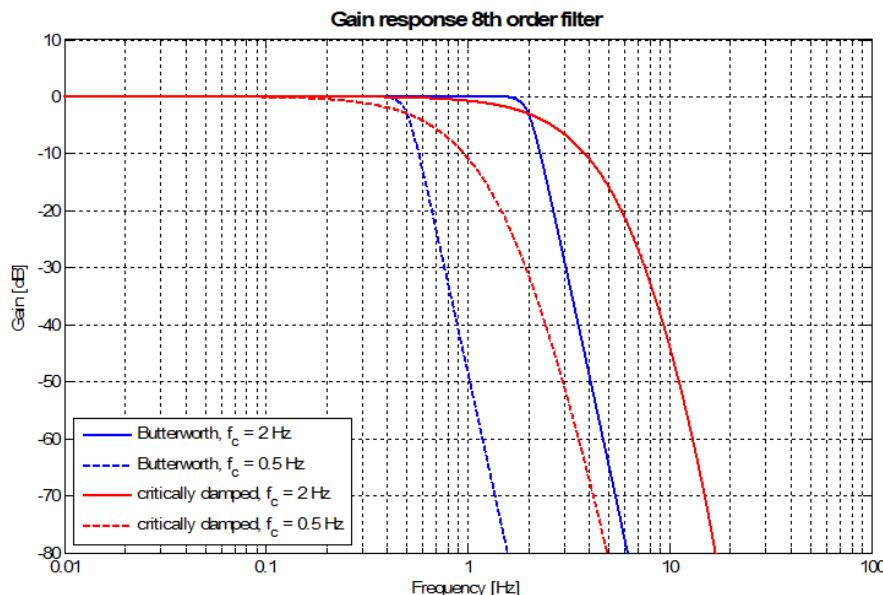


Figure 9: Amplitude response of the two low pass filters

7.2 Sensor fusion filter

7.2.1 Functionality

External accelerations, such as those caused by vehicles braking or cornering, cannot be reliably suppressed by the low pass filter.

In addition to the earth's gravitational field, the sensor fusion filter uses the rotation rate information of a gyroscope as a measured variable. As a result, external accelerations can be suppressed without the angular information being subject to a noticeable time delay.

The acceleration signal used for the sensor fusion is first preprocessed with the filter described in chapter 7.1 "Low pass filter".

By default, sensor fusion works with an adaptive configuration, i.e. the filter settings are dynamically adjusted to the current motion state of the sensor. This results in optimal damping of external disturbances both in very dynamic applications and at rest.

Filter	Adjustable range	Filter
Sensor fusion	100 ms ... 10 s	Dynamic applications, measurements during acceleration/braking or cornering,

Table 4: Filter selection fusion filter

7.2.2 Advanced configuration of the sensor fusion filter

The value of the damping factor for suppression of external accelerations can be adjusted (see Table 5).

The configuration can be used to avoid a drift of the output values in very dynamic or permanently moving systems. For customer-specific configuration of the sensor for special applications, please contact GEMAC Chemnitz GmbH.

Configuration	Adjustable range	Description
Damping factor	0 ... 20 (default: 19)	0: minimum damping of external accelerations during sensor fusion 19: maximum damping 20: The angle is only calculated from gyro data, warning: drift of the output data is possible

Table 5: Extended configuration of the sensor fusion

7.2.3 Drift compensation of the rotation rate

The output data of the gyroscope in the sensor are offset-afflicted. In order to compensate for the variable offset, the sensor is equipped with an automatic drift compensation, which dynamically determines the offset when the sensor is not accelerating. It is also possible to deactivate the automatic compensation by means of a command or to trigger it manually. The offset is then determined within 2 seconds after the command. The sensor should stand still during this time.

8 Functional description CAN interface

8.1 Zero Point Adjustment

The zero point of the sensor can be adjusted (parameterized) for the angle output. This allows to set the zero position in the installed state of the sensor. For this purpose, the sensor has a memory for a zero point offset. Values entered here are added to the internally measured angle when the angle is output.

In case the current position should be set as zero point, the current measured inclination value must be set as negative value in the zero offset register. The sensor is able to perform this kind of Zero Point Adjustment itself (Automatic Zero Point Adjustment). Therefore the user has to send a telegram **without** parameters (OFX;OFY / FSC = 28h/29h - depending on sensor type, DLC = 1). The sensor then sets the current position at the time of reception of the telegram as negative value in the zero offset register.

8.2 Digital filter

The cut-off frequency is programmable by FSC = 27h (Set Parameter telegram). Values for CF (cut-off frequency) are allowed between 100 (= 0.1 Hz) and 25000/8000 (= 25 Hz/8 Hz). The filter type is selected with the parameter FT.

8.3 Sensor fusion algorithm

The sensor fusion of acceleration sensor and gyroscope can be activated or deactivated by FSC = 2Bh (Set Parameter Telegram). The filter duration of the sensor fusion algorithm can be set in a range between 10 ms and 10 s. This parameter is equal to the maximum suppression time of external disturbances. The sensor fusion can be configured independent from the digital filter.

In the extended configuration, the adaptive damping, the damping factor and the dynamic drift compensation can also be configured using FSC = 2Ch (see chapter 8.10.6 „Configuration of sensor fusion“).

8.4 Format of the CAN telegrams

For reading and writing device parameters, and to output the data from the sensor, two CAN-IDs exists. One ID for receiving data/commands and another one to send the response/confirmation. These IDs are saved in an internal permanent memory (EEPROM) and can be configured freely. CAN 2.0 A (Standard Frame Format) as well as CAN 2.0 B (Extended Frame Format) are supported.

8.4.1 Data part in the CAN telegram

The data part of all transmission and reception telegrams always contains a function select code (FSC) and additionally up to seven data bytes depending on the FSC. The length of the data part of the CAN telegram is defined in the DLC field (Data Length Code). The general format of the data part is structured as follows:

Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
FSC	D0/Status	D1	D2	D3	D4	D5	D6

Table 6: Format of the CAN telegrams

FSC: Function Select Code - Function code. Each telegram of the sensor always contains the FSC of the preceding request as confirmation.

D0-D7: Data bytes, depending on the function select code

Status: Status information which is included in each telegram output by the sensor (see section 8.4.2 „Status byte (STATUS)“).

Telegrams which are transmitted to the sensor may contain further data bytes beyond the needed ones - those will be discarded. Telegrams sent by the sensor only contain the data bytes defined by the function select code.

8.4.2 Status byte (STATUS)

Each telegram sent by the sensor contains the recent status of the device in Byte1 (see Table 6) of the CAN telegram. The status byte is structured as follows:

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
reserved	Accuracy Warning	reserved	reserved	CmdParam Error	EEPROM Error	Autobaud Detection	Default Param

Table 7: Status byte

DefaultParam: The standard device parameters are set. This bit is reset only when a device parameter was changed to a value different from the factory parameters. The sensors are supplied with the standard device parameters, so this bit is set by default (refer to section 8.7 „Default Device Parameters“).

AutobaudDetection: The baud rate is set to automatic detection (BR = 0) (refer to section 8.10.3 „Configuration of the Baud Rate“).

EEPROMError: While reading/writing on the EEPROM an error occurred, for example data loss. The correct function of the sensor is no longer guaranteed. This bit is reset by reading the status byte (Set Parameter Telegram with FSC = 02h).

CmdParamError: A received telegram contained a command or parameter error (invalid FSC, too less data bytes, invalid values). This bit is also set if an error occurred in the execution of a function (for example writing/reading error on EEPROM). This bit is reset by reading the status byte (Set Parameter Telegram with FSC = 02h).

AccuracyWarning: If the maximum values for acceleration or rotation rate are exceeded, the accuracy of the sensor is limited. This bit resets automatically when the sensor operates under the specified conditions again.

8.5 Boot Up Message

After device reset (hardware or software reset) the sensor outputs a "boot up" message twice. With this the correct boot process is displayed and the Set-Parameter-ID is notified (CAN-ID on which the sensor can be parametrized). This telegram contains the following information:

"Boot up" message after device reset: Reply-Parameter-ID (default ID: 301h)

FSC	D0	D1	D2	D3	D4	D5	D6
FFh	Status	SID0	SID1	SID2	SID3	SWV0	SWV1

Table 8: Boot Up Message

SID0-3: Set-Parameter-ID (see section 8.6 „Read/Write device parameters“)

SWV0-1: Software version; Example: SWV0 = 0x44, SWV1 = 0x03 → Software version v3.44

8.6 Read/Write device parameters

All parameters like inclinations values, CAN-IDs, Baud Rate, Cyclic Time etc. can be set and requested via the Set Parameter Telegram (Request Telegram). The sensor confirms each telegram with a Reply Parameter Telegram (Reply Telegram).

8.6.1 Set Parameter Telegrams

Table 9 shows all the supported function select codes and the parameters of a Set Parameter Telegram.

FSC	D0	D1	D2	D3	D4	D5	D6	Description
00h	-	-	-	-	-	-	-	Read dynamic angle values in perpendicular angle format (incl. cycle counter in cyclic mode)
01h	-	-	-	-	-	-	-	Read static angle values in perpendicular angle format
02h	-	-	-	-	-	-	-	Read status
03h	-	-	-	-	-	-	-	Read product number and revision
04h	-	-	-	-	-	-	-	Read serial number and software version
0Ah	-	-	-	-	-	-	-	Read dynamic angle values in Euler angle format
0Bh	-	-	-	-	-	-	-	Read static angle values in Euler angle format
0Ch	-	-	-	-	-	-	-	Read acceleration data
0Eh	-	-	-	-	-	-	-	Read unfiltered acceleration data
10h	-	-	-	-	-	-	-	Set-Parameter-ID
11h	-	-	-	-	-	-	-	Reply-Parameter-ID
12h	-	-	-	-	-	-	-	Sync-ID
13h	-	-	-	-	-	-	-	Baud Rate
14h	-	-	-	-	-	-	-	Automatic Bus-Off Recovery
15h	-	-	-	-	-	-	-	Cyclic Time
16h	-	-	-	-	-	-	-	Cyclic Mode
17h	-	-	-	-	-	-	-	Cut-off Frequency Digital Filter, Filter selection

Read device parameters

FSC	D0	D1	D2	D3	D4	D5	D6	Description
18h	-	-	-	-	-	-	-	Zero Offset X
19h	-	-	-	-	-	-	-	Zero Offset Y
1Bh	-	-	-	-	-	-	-	Read sensor fusion configuration
1Ch	-	-	-	-	-	-	-	Read configuration of sensor fusion 2
20h	ID0	ID1	ID2	ID3	-	-	-	Set-Parameter-ID*
21h	ID0	ID1	ID2	ID3	-	-	-	Reply-Parameter-ID*
22h	ID0	ID1	ID2	ID3	-	-	-	Sync-ID*
23h	BR	-	-	-	-	-	-	Baud Rate*
24h	ABOR	-	-	-	-	-	-	Automatic Bus-Off Recovery
25h	ZYZ0	ZYZ1	-	-	-	-	-	Cyclic Time
26h	ZYM	-	-	-	-	-	-	Cyclic Mode
27h	FG0	FG1	FT	-	-	-	-	Cut-off Frequency Digital Filter, Filter selection
28h	OFX0	OFX1	-	-	-	-	-	Zero Offset X
29h	OFY0	OFY1	-	-	-	-	-	Zero Offset Y
2Bh	EN	FLO	FL1	-	-	-	-	Configuration sensor fusion
2Ch	ED	DG	DF	TDG	-	-	-	Configuration sensor fusion 2
40h	'L'	'O'	'A'	'D'	-	-	-	Load default device parameters (factory defaults)
50h	'S'	'A'	'V'	'E'	-	-	-	Write device parameters in EEPROM
FFh	'R'	'E'	'S'	'E'	'T'	-	-	Software reset
FFh	-	-	-	-	-	-	-	Read alive telegram ("Boot Up" Message)

Write device parameters

Table 9: Supported FSC and Parameters of the Set Parameter Telegrams (Request)

8.6.2 Reply Parameter Telegrams

As confirmation to the correctly received Set Parameter Telegram each Reply Parameter Telegram contains the identical FSC. The error bits of the status byte indicate insufficient or invalid parameters or errors that occurred while writing into the nonvolatile memory (refer to section 8.4.2 „Status byte (STATUS)“). The structure of the Reply Parameter Telegrams in dependence to the FSC is shown in Table 10.

FSC	D0	D1	D2	D3	D4	D5	D6	Description
00h	Status	ANGLE_X_D		ANGLE_Y_D		(CNT)		Read dynamic angle values in perpendicular angle format (incl. cycle counter in cyclic mode)
01h	Status	ANGLE_X_S		ANGLE_Y_S				Read static angle values in perpendicular angle format
02h	Status	-	-	-	-	-	-	Read status
03h	Status	PRO	PR1	PR2	PR3	RVO	RV1	Read product number and revision
04h	Status	SNO	SN1	SN2	SN3	SWV0	SWV1	Read serial number and software version

* Changes to communication parameters such as ID and Baud Rate will take effect after reboot.

FSC	DO	D1	D2	D3	D4	D5	D6	Description
0Ah	Status	PITCH_D		ROLL_D	-	-	-	Read dynamic angle values in Euler angle format
0Bh	Status	PITCH_S		ROLL_S				Read static angle values in Euler angle format
0Ch	Status	ACC_X		ACC_Y	ACC_Z			Read acceleration data
0Eh	Status	AR_X		AR_Y	AR_Z			Read the angular rate
10h	Status	ID0	ID1	ID2	ID3	-	-	Set-Parameter-ID*
11h	Status	ID0	ID1	ID2	ID3	-	-	Reply-Parameter-ID*
12h	Status	ID0	ID1	ID2	ID3	-	-	Sync-ID*
13h	Status	BR	-	-	-	-	-	Baud Rate*
14h	Status	ABOR	-	-	-	-	-	Automatic Bus-Off Recovery
15h	Status	ZYZ0	ZYZ1	-	-	-	-	Cyclic Time
16h	Status	ZYM	-	-	-	-	-	Cyclic Mode
17h	Status	FG0	FG1	FT	-	-	-	Cut-off Frequency Digital Filter, Filter selection
18h	Status	OFO OFOX0	OF1 OFX1	-	-	-	-	Zero Offset X
19h	Status	OFY0	OFY1	-	-	-	-	Zero Offset Y
1Bh	Status	EN	FL0	FL1	-	-	-	Configuration sensor fusion filter
1Ch	Status	ED	DG	DF	-	-	-	Configuration sensor fusion filter 2
20h	Status	-	-	-	-	-	-	Set-Parameter-ID
21h	Status	-	-	-	-	-	-	Reply-Parameter-ID
22h	Status	-	-	-	-	-	-	Sync-ID
23h	Status	-	-	-	-	-	-	BaudRte
24h	Status	-	-	-	-	-	-	Automatic Bus-Off Recovery
25h	Status	-	-	-	-	-	-	Cyclic Time
26h	Status	-	-	-	-	-	-	Cyclic Mode
27h	Status	-	-	-	-	-	-	Cut-off Frequency Digital Filter, Filter selection
28h	Status	-	-	-	-	-	-	Zero Offset X
29h	Status	-	-	-	-	-	-	Zero Offset Y
2Bh	Status	-	-	-	-	-	-	Configuration sensor fusion filter
2Ch	Status	-	-	-	-	-	-	Configuration sensor fusion filter 2
40h	Status	-	-	-	-	-	-	Load default device parameters (factory defaults)
50h	Status	-	-	-	-	-	-	Save device parameters in EEPROM
FFh	Status	Set-Param ID	Set-Param ID	Set-Param ID	Set-Param ID	SWV0	SWV1	Alive telegram ("Boot Up" Message) Software reset (2 messages with FSC = FFh)

Read device parameters

Write device parameters

* Changes to communication parameters such as ID and Baud Rate will take effect after reboot.

Table 10: Function Codes and Parameters of the Reply Parameter Telegrams

8.7 Default Device Parameters

The sensor is delivered with the default device parameters shown in Table 11. These can be re-stored by a Set Parameter Telegram with FSC = 40h (see section 8.6 „Read/Write device parameters“).

Parameter	Default Value	Description
Set-Parameter-ID	300h	CAN 2.0 A Standard Frame
Reply-Parameter-ID	301h	CAN 2.0 A Standard Frame
Sync-ID	100h	CAN 2.0 A Standard Frame
Baud Rate (BR)	0	Automatic Baud Rate Detection
Automatic Bus-Off Recovery	0	deactivated
Cyclic Time (CYT)	250	250 ms
Cyclic Mode (CYM)	0	deactivated
Cut-off Frequency (CF); filter type	5000; 2	5000 mHz = 5 Hz; critically damped filter
Sensor fusion; suppression time	1; 5000	Sensor fusion activated, 5000 ms = 5 s
Dynamic gyro offset correction	1	activated
Damping factor	17	Sensor fusion with damping factor 17
Zero Offset	0	Off

Table 11: Device parameters default settings

These default settings will also be set if invalid device parameters are read from the nonvolatile memory after device reset. If the default settings have been restored this is displayed by the status bit STATUS: DefaultParam = 1.

8.8 Transfer of the inclination values (perpendicular angle)

For the transfer of the inclination values the sensor supports following modes:

- Polling Mode
- Synchronous Mode
- Cyclic Mode

All three modes are active at any time and usable at the same time. Mode-switching is not necessary.

8.8.1 Polling Mode

The polling mode is always available. The inclination value(s) of the sensor can be requested via a Set Parameter Telegram. The sensor replies to that telegram via a Reply Parameter Telegram. Both telegrams are structured as follows:

FSC	D0	D1	D2	D3	D4	D5	D6
00h	-	-	-	-	-	-	-

Table 12: Request telegram: inclination values (FSC = 00h)

FSC	D0	D1	D2	D3	D4	D5	D6
00h	Status	AngleX0	AngleX1	AngleY0	AngleY1	-	-

Table 13: Reply telegram: inclination values (FSC = 00h)

AngleX/Y0/1: Angle value of the X/Y-axis

Format: 16 bit signed value, complement on two

Conversion: Value / 100 = angle value

8.8.2 Synchronous Mode

The synchronous transmission is used to receive inclination values from more than one sensor at the same time. Therefore the sensor provides a synchronization telegram (Default: Sync-ID = 100h). The synchronization telegram is a broadcast message to all CAN nodes without user data (DLC = 0). This synchronization telegram is transmitted from a bus node (usually the master) cyclically at fixed intervals. The sensor reads its current angle values on receipt of the Sync message and sends the data directly afterward as soon as the bus allows this. The reply telegram to a synchronization telegram is the same as in polling mode (Table 13).

8.8.3 Cyclic Mode

The sensor supports the cyclical transmission of the recent position (angle position) after the expiration of a defined time interval. This operation mode can be (de)activated separately and the needed time interval (Cyclic Time) can be parametrized freely. Corresponding to the operational principle shown in Figure 10 the sensor outputs the recent position value in periodical intervals (Cyclic Time) with a Reply Parameter Telegram as in the polling mode with additional counter in the following data bytes (Table 14). This 16-bit counter is increased after the end of the set Cycle Time - regardless of whether the telegram was sent or not. Thus, the temporal relation in case of lost telegrams can be restored.

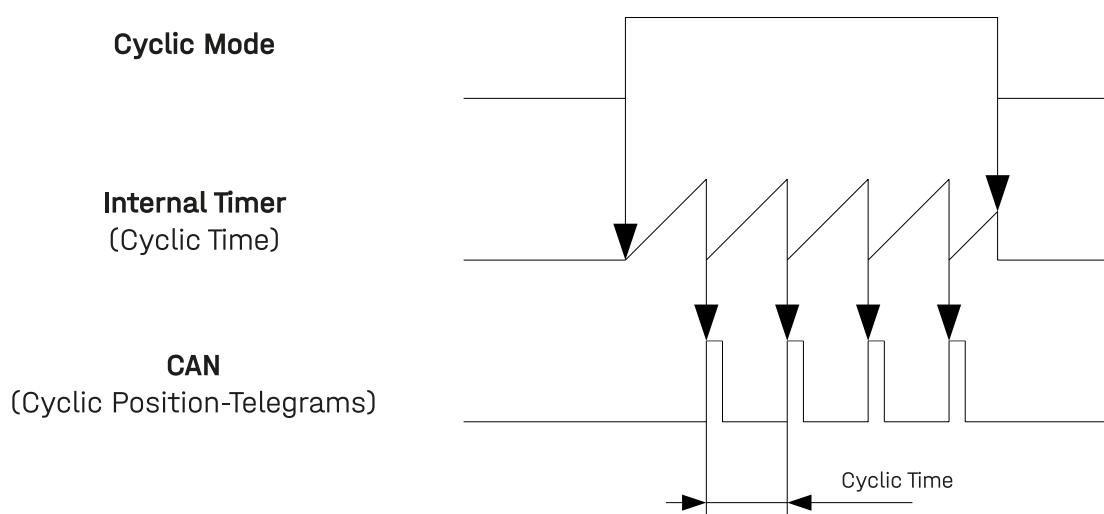


Figure 10: Operational Principle of the Cyclic Mode

FSC	D0	D1	D2	D3	D4	D5	D6
00h	Status	AngleX0	AngleX1	AngleY0	AngleY1	CNT0	CNT1
0Ch	Status	ACC_X0	ACC_X1	ACC_Y0	ACC_Y1	ACC_Z0	ACC_Z1
0Dh	Status	AR_X0	AR_X1	AR_Y0	AR_Y1	AR_Z0	AR_Z1

Table 14: Telegrams in cyclic mode

8.9 Alternative output values

8.9.1 Euler-Angles

Using FSC 0Ah, the Euler-Angles Pitch and Roll can be read. The Pitch angle equals the inclination x-axis of the sensor (measurement range $\pm 90^\circ$). The Roll angle is the rotation angle around the x-axis (measurement range $\pm 180^\circ$).

The value for rotation in the horizontal plane (Yaw or heading) is not transmitted because it is not detectable by the Accelerometer.

The accuracy of Roll is reduced in the pitch $\sim 90^\circ$ or pitch $\sim -90^\circ$ range. At precisely 90° , the Roll movement corresponds to the rotation in the horizontal reference plane (= Yaw, Gimbal-Lock). In this range, the output of the roll angle is undefined.

FSC 0Ah outputs dynamic angles, which are calculated by the parameterizable fusion filter (FSC 2Bh) from filtered acceleration (FSC 0Ch) and gyro data (FSC 0Eh). FSC 0Bh outputs static angles, which is calculated only based on the filtered acceleration data.

Format: 16 bit signed value

Conversion: Wert/100 = angle value

8.9.2 Angular Rate output (Gyro sensor raw data)

With the Set Parameter Telegram FSC 0Eh, the rotation rates of all three axes of the gyro sensor queried.

Format: 16 bit signed value

Conversion: value*7/800 = angular rate in $^\circ/\text{s}$ (measurement range $\pm 250 \text{ } ^\circ/\text{s}$)

8.9.3 Transfer of acceleration values

FSC 0Dh outputs the acceleration values of all three axes of the sensor. FSC 0Dh contains the filtered acceleration values, which calculated with the parameterizable low pass filter (FSC 27h).

Format: 16 bit signed value

Conversion: value/16384 = acceleration in g (measurement range $\pm 2 \text{ g}$)

8.10 Configuration of the sensor

8.10.1 Configuration of Cyclic Mode

FSC	D0	D1	D2	D3	D4	D5	D6
25h	CYZ0	CYT1	-	-	-	-	-
26h	CYM						

CYZ0/1: Cyclic Time in ms

Format: 16 bit unsigned integer value (1 ... 65535)

CYM: (De)activate Cyclic Mode

= 0 → Cyclic Mode deactivated

= 1 → Cyclic Mode activated

The section 8.8.3 „Cyclic Mode“ contains a detailed description of the usage of the Cyclic Mode.

8.10.2 Configuration of the CAN Identifier

FSC	D0	D1	D2	D3	D4	D5	D6
20h	ID0	ID1	ID2	ID3	-	-	-
21h							
22h							

ID0-3: CAN Identifier (ID), 11-Bit-ID (CAN 2.0 A) or 29-Bit-ID (CAN 2.0 B)

Format: 32 bit value with the following structure:

ID3																ID2																ID1																ID0															
7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0																								
0	-																11-Bit-ID (CAN 2.0 A)																29-Bit-ID (CAN 2.0 B)																														
1	-																29-Bit-ID (CAN 2.0 B)																29-Bit-ID (CAN 2.0 B)																														

Table 15: CAN Identifier

Example: CAN-ID = 361h (29-Bit-ID, CAN 2.0 B)

ID0 = 61h, ID1 = 03h, ID2 = 00h, ID3 = 80h

If a CAN-ID is set newly, it must not be used by another telegram type. If this occurs the error bit STATUS:CmdParamError is set in the Reply Parameter Telegram and the CAN-ID is refused.

8.10.3 Configuration of the Baud Rate

FSC	D0	D1	D2	D3	D4	D5	D6
23h	BR	-	-	-	-	-	-

BR: Code of a Baud Rate

Format: 8 bit unsigned integer value (0 ... 10)

Code: 0: Automatic Baud Rate Detection

1: 10 kBit/s	2: 20 kBit/s	3: 50 kBit/s
4: 100 kBit/s	5: 125 kBit/s	6: 250 kBit/s
7: 500 kBit/s	8: 800 kBit/s	9: 1 Mbit/s

8.10.4 Configure Automatic Bus-Off Recovery

FSC	D0	D1	D2	D3	D4	D5	D6
24h	ABOR	-	-	-	-	-	-

ABOR: Enable/Disable Automatic Bus-Off Recovery

- = 0 Enable Automatic Bus-Off Recovery (Device remains in the state Bus-Off)
- = 1 Disable Automatic Bus-Off Recovery (Device starts up again)

8.10.5 Configuration Cut-off frequency of the low pass filter

FSC	D0	D1	D2	D3	D4	D5	D6
27h	FG0	FG1	FT	-	-	-	-

FG0/1: Cut-off Frequency in mHz when selecting the Butterworth or critically damped filter

Format: 16bit unsigned integer value (100 ... 25000/8000)

- FT:
 - 0 Low pass filter deactivated
 - 1 Butterworth Filter activated (maximum filter frequency = 25000 mHz)
 - 2 Critically Damped Filter activated (maximum filter frequency = 8000 mHz)

The section 7.1 "Low pass filter" contains a detailed description.

8.10.6 Configuration of sensor fusion

FSC	D0	D1	D2	D3	D4	D5	D6
2Bh	EN	FLO	FL1	-	-	-	-

EN: 0 Sensor fusion deactivated

1 Sensor fusion activated (factory setting)

FL: Duration of interference suppression in milliseconds when sensor fusion filter is selected

Format: 16 bit unsigned integer value (100 ... 10000)

FSC	D0	D1	D2	D3	D4	D5	D6
2Ch	0	DG	DF	TDG	-	-	-

DG: 0 dynamic gyro drift compensation deactivated

1 Dynamic gyro drift compensation activated (default value)

DF: Damping factor; Minimum damping value 0 to maximum damping 19

20: only gyro data is used for angle calculation; Warning: drift possible

TDG: Carry out manual drift compensation (duration: 2 seconds)

8.10.7 Configuration of Zero Point Adjustment

FSC	D0	D1	D2	D3	D4	D5	D6
28h	OFX0	OFX1	-	-	-	-	-
29h	OFY0	OFY1	-	-	-	-	-

OFX/OFY: Type: Zero Offset X/Y

Format: 16 bit signed value (-18000 ... +17999)

The section 8.1 "Zero Point Adjustment" contains a detailed description.

8.10.8 Restoration of Default Device Parameters

FSC	D0	D1	D2	D3	D4	D5	D6
40h	'L'	'O'	'A'	'D'	-	-	-

The sensor can be reset to default device parameters by writing the signature "LOAD" to the sensor (FSC = 40h). Thus the default parameters with the exception of the ID and the Baud Rate are immediately active again. After a software reset of the sensor or a hardware reset, the factory parameter of the IDs and the baud rate take effect again.

D0	D1	D2	D3
'L'	'O'	'A'	'D'
4Ch	4Fh	41h	44h

Table 16: Restore Default Device Parameters

The section 8.4 „Format of the CAN“ contains a detailed description.

8.10.9 Save Device Parameters

FSC	D0	D1	D2	D3	D4	D5	D6
50h	'S'	'A'	'V'	'E'	-	-	-

If parameters are changed in the sensor, they take effect immediately, except for the IDs and the Baud Rate. Thus the new parameters are still active after a reset, these must be stored in the internal non-volatile memory. This is done by writing the signature "SAVE" on the FSC = 50h.

D0	D1	D2	D3
'S'	'A'	'V'	'E'
53h	41h	56h	45h

Table 17: Save Device Parameters

8.10.10 Perform a software reset

FSC	D0	D1	D2	D3	D4	D5	D6
FFh	'R'	'E'	'S'	'E'	'T'	-	-

A software reset of the sensor is carried out by sending the telegram with FSC = FFh. The sensor then restarts and transmits an alive (bootup) telegram. After a software reset of the sensor, unsaved parameters are discarded.

D0	D1	D2	D3	D4
'R'	'E'	'S'	'E'	'T'
52h	45h	53h	45h	54h

Table 18: Perform a software reset

9 Functional description CANopen interface

9.1 Overview of function

The sensor contains a standardized CANopen interface according to CiA DS-301 and a device profile according to CiA DSP-410. All measured values and parameters are accessible through the object dictionary (OD). The individual configuration can be saved in the internal permanent memory (EEPROM). The following CANopen functions are available:

- four transmission data objects (TPDO1 to TPDO4), dynamically mappable in four possible operating modes:
 - Individual request via Remote Transmit Request Telegram (RTR)
 - Cyclic transmission at defined intervals
 - Event-controlled transmission on inclination change (TPDO1)
 - Synchronous transmission after receiving a SYNC telegram
- One Service Data Object (Default SDO)
- Error messages by Emergency Object (EMCY) with support of the:
 - General Error Register
 - Manufacturer specific status register (Manufacturer Status)
 - List of errors (Pre-defined Error Field)
- Heartbeat and Nodeguarding / Lifeguarding monitoring mechanisms
- Store and load function of all parameters (Store and Load Parameter Field)

Further manufacturer and profile specific characteristics exist in addition to the CiA DS-301 functionality:

- Configurable cut-off frequency (low pass filter)
- Sensor fusion filter
- Configuration of the minimum angle change for TPDO1 transmit event
- Direction switch of the inclination value
- Configurable zero point of the inclination value
- Setting of the Node-ID as well as the baud rate via LSS service according to CiA DSP-305
- Automatic baud rate detection according to CiA AN-801

9.2 CANopen structure

CANopen is a CAN-based open protocol standard in automation and was standardized in association with "CAN in Automation" (CiA). Like virtually all field buses CANopen is based also on the ISO/OSI 7-layer model. The protocol makes use of the CAN bus as a transmission medium and defines the elements for network management, the use of the CAN identifier (message address), the temporal behavior on the bus, the type of data transfer and application profiles. This is to ensure that CANopen devices from different manufacturers can be combined.

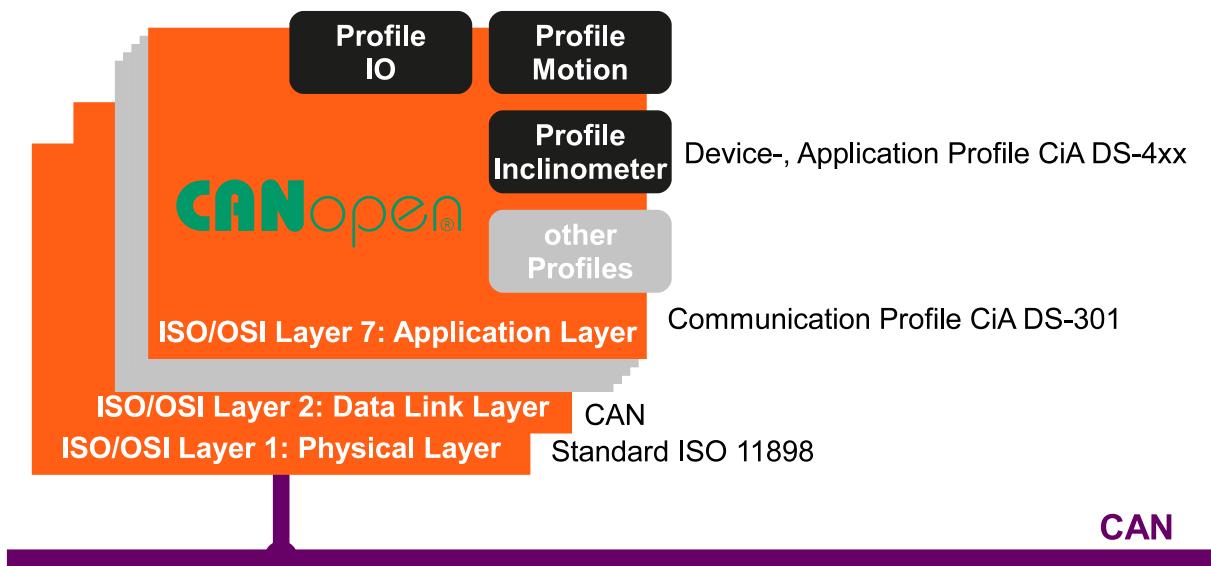


Figure 11: CANopen structure

CANopen describes the ISO / OSI layer 7 (application layer) as a communication profile that was specified in the CiA standard CiA DS-301. The standard defines the method of communication for all devices consistently. In addition, more device and application profiles for specific classes of devices and applications in the CiA standard DS-4xx are defined.

9.3 CANopen device model

The exchange of data between CANopen devices is realized via data objects. The CANopen communication profile thus provides for the following types of objects. The process data objects (PDO) are high-priority messages used for the exchange of process data. Access to the object dictionary of a device is done via the service data objects (SDOs). Network management objects are used to control the state machine of the CANopen device and to monitor the nodes. Furthermore, there are special objects for error messages (Emergency), Synchronization (SYNC) and time stamp. Every CANopen device has a CANopen object dictionary, in which the parameters for all CANopen objects are registered.

9.4 COB-IDs

The CAN identifier of the communication objects is determined according to the Pre-defined connection set at each reset (communication, application and hardware reset), depending on the selected Node-ID. Table 19 shows the calculation base with the default values (Node-ID = 10).

Communication object (COB)	Calculation of the COB-ID	Default value (Node-ID = 10)
NMT	0h	0h
SYNC	80h	80h
EMCY	80h + Node-ID	8Ah
TPDO1	180h + Node-ID	18Ah
TPDO2	280h + Node-ID	28Ah
TPDO3	380h + Node-ID	38Ah

Communication object (COB)	Calculation of the COB-ID	Default value (Node-ID = 10)
TPDO4	480h + Node-ID	48Ah
Standard-SDO (Client > Server)	600h + Node-ID	60Ah
Standard-SDO (Server > Client)	580h + Node-ID	58Ah
Heartbeat	700h + Node-ID	70Ah

Table 19: Calculation of the COB-IDs for Pre-defined Connection Set

9.5 Network management: NMT

Figure 12 shows the NMT state machine of a CANopen device. After Initialization the device automatically goes into the state Pre-Operational. The device sends a Boot-Up Message. In this state it can be configured via the object dictionary. The service data objects (SDO) are already active. The process data objects, however, are still locked.

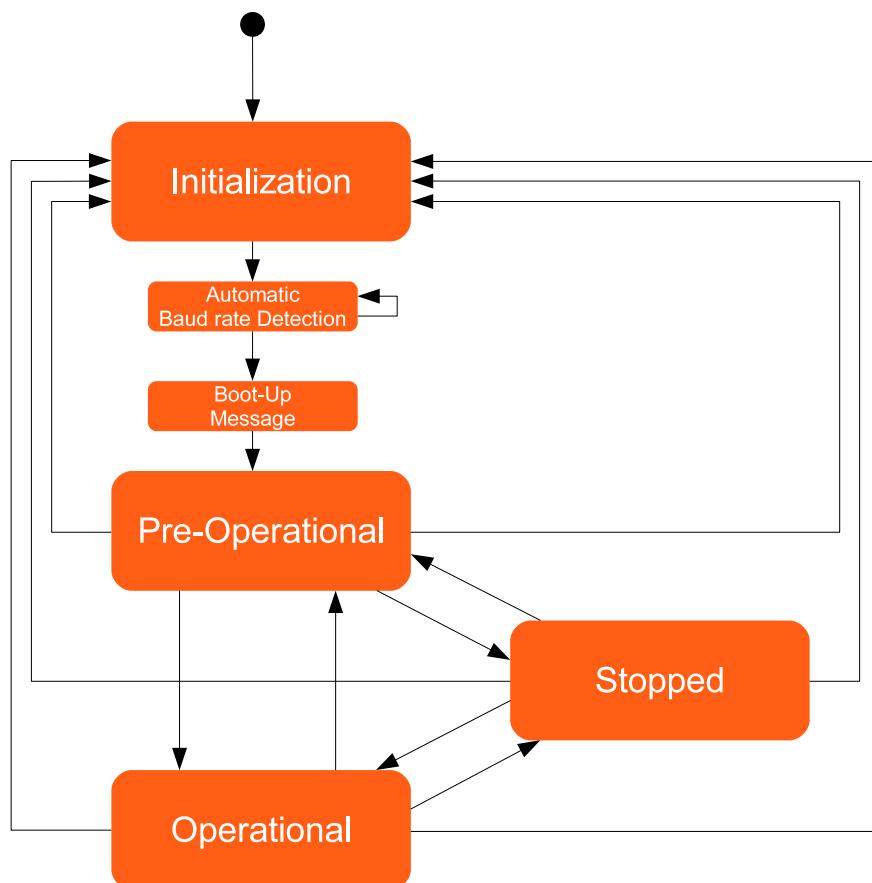


Figure 12: NMT state diagram

By sending the CAN message "Start Remote Node" the unit will go into the state Operational. Now the process data objects are active. In Stopped state, no communication with the exception of Nodeguarding and Heartbeat is possible.

By setting the Self-Starting-Device bit on object 1F80h, the sensor can be configured in such a way that it changes directly to the operational state after initialization. This enables e.g. a direct data output after starting up without further communication with the sensor.

9.6 Process data: PDO (TPDO1 - TPDO4)

The sensor has two transmit process data objects (TPDO1 and TPDO4). TPDO1 contains the current values of inclination (perpendicular angle) by default. The PDO mapping of the measured values is dynamically adjusted. The default mapping is shown in Table 20.

Data part of the des CAN telegram of the TPDO1							
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
perpendicular angle longitudinal (x axis, OV: 6010h)	perpendicular angle lateral (y axis, OV: 6020h)					unused	

Table 20: TPDO1 default mapping

The send process data TPDO2 bis TPDO4 are disabled by default (valid bit of COB-ID set). The default mapping is shown in Table 21, Table 22 and Table 23.

Data part of the des CAN telegram of the TPDO2							
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
Euler angle Pitch (OV: 3100h:01h)	Euler angle Roll (OV: 3100h:02h)					unused	

Table 21: TPDO2 default mapping

Data part of the des CAN telegram of the TPDO3							
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
acceleration X (OV: 3102h:01h)	acceleration Y (OV: 3102h:02h)	acceleration Z (OV: 3102h:03h)				unused	

Table 22: TPDO3 default mapping

Data part of the des CAN telegram of the TPDO4							
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7
angular rate X (OV: 3103h:01h)	angular rate Y (OV: 3103h:02h)	angular rate Z (OV: 3103h:03h)				unused	

Table 23: TPDO4 default mapping

The following objects can be mapped to the TPDOs:

Index	Subindex	Description	Format	Resolution	Value range
3100h	1	Euler angle: Pitch	16bit signed	0,01 °/bit	-90,00 ... 90,00
3100h	2	Euler angle: Roll	16bit signed	0,01 °/bit	-180,00 ... 180,00
3102h	1	Acceleration, x axis	16bit signed	1/16384 g/bit	-2 ... 2
3102h	2	Acceleration, y axis	16bit signed	1/16384 g/bit	-2 ... 2
3102h	3	Acceleration, z axis	16bit signed	1/16384 g/bit	-2 ... 2
3102h	4	Unfiltered acceleration: x axis	16bit signed	1/16384 g/bit	-2 ... 2
3102h	5	Unfiltered acceleration: y axis	16bit signed	1/16384 g/bit	-2 ... 2
3102h	6	Unfiltered acceleration: z axis	16bit signed	1/16384 g/bit	-2 ... 2

Index	Subindex	Description	Format	Resolution	Value range
3103h	1	Angular rate, x axis	16bit signed	7/800 °/s/bit	-250 ... 250
3103h	2	Angular rate, y axis	16bit signed	7/800 °/s/bit	-250 ... 250
3103h	3	Angular rate, z axis	16bit signed	7/800 °/s/bit	-250 ... 250
3105h	1	Static perpendicular angle: x axis	16bit signed	0,01 °/bit	-90,00 ... 90,00
3105h	2	Static perpendicular angle: y axis	16bit signed	0,01 °/bit	-90,00 ... 90,00
3105h	3	Static Euler angle: Pitch	16bit signed	0,01 °/bit	-90,00 ... 90,00
3105h	4	Static Euler angle: Roll	16bit signed	0,01 °/bit	-180,00 ... 180,00
6010h	0	Perpendicular angle: x axis	16bit signed	0,01 °/bit	-90,00 ... 90,00
6020h	0	Perpendicular angle: y axis	16bit signed	0,01 °/bit	-90,00 ... 90,00
6511h	0	Temperature	8bit signed	1 °C / bit	-128 ... 127

Table 24: Mappable objects

9.6.1 PDO communication types

9.6.1.1 Individual Request (Polling)

The TPDOs (when activated) can be requested at any time by transmitting a remote-transmit request (RTR) telegram.

9.6.1.2 Cyclic Transmission

The configuration of the TPDOs 1 to 4 is done via the objects 1800h to 1803h.

Cyclic transmission of the TPDO is activated when the SubIndex 05h (interval time in milliseconds) contains a value greater than 0, and the COB-ID at SubIndex 01h is valid (bit 31 deleted). Furthermore, the SubIndex 02h (transmission type) must contain the value 254 (asynchronous, manufacturer-specific). In the OPERATIONAL state, the sensor then cyclically transmits the TPDO with the set period duration.

9.6.1.3 Synchronous Transmission

The synchronous transmission is used to get inclination values from more than one sensor at the same time. Therefore, CANopen provides a SYNC object - a CAN telegram without user data - transmitted with high priority on the bus. This SYNC object is transmitted from a bus node (usually the master) cyclically at fixed intervals. The sensor reads its current angle value after every "n-th" reception of the SYNC object and sends the TPDO directly afterward as soon as the bus allows this.

Synchronized transmission activates by writing the configuration object for the corresponding TPDO. (Object 1800h to 1803h for TPDO 1 to 4). For this, the SubIndex 02h (transmission type) must contain the value n = 1...240.

9.6.1.4 Event-controlled transmission on inclination change (manufacturer specific)

The bus load from PDOs can be reduced if the TPDO1 is only transmitted when an appropriate angle change has occurred. This function can only be configured in the manufacturer-specific part of the object directory under index 3001h. To this end, the entry 1800h/02h (transmission type) must contain the value 254

(asynchronous, manufacturer-specific). The event controlled transmission on inclination change can be activated for TPDO1 only.

9.7 Service data: SDO

The parameters, listed in the object dictionary, are read and written through Service Data Objects (SDOs). As shown in Table 25, every object can directly be addressed over a 16-bit index. In addition, each index has an 8-bit subindex that allows an additional choice within an index. The 8 bytes of the SDOs are placed in the data area of the CAN message.

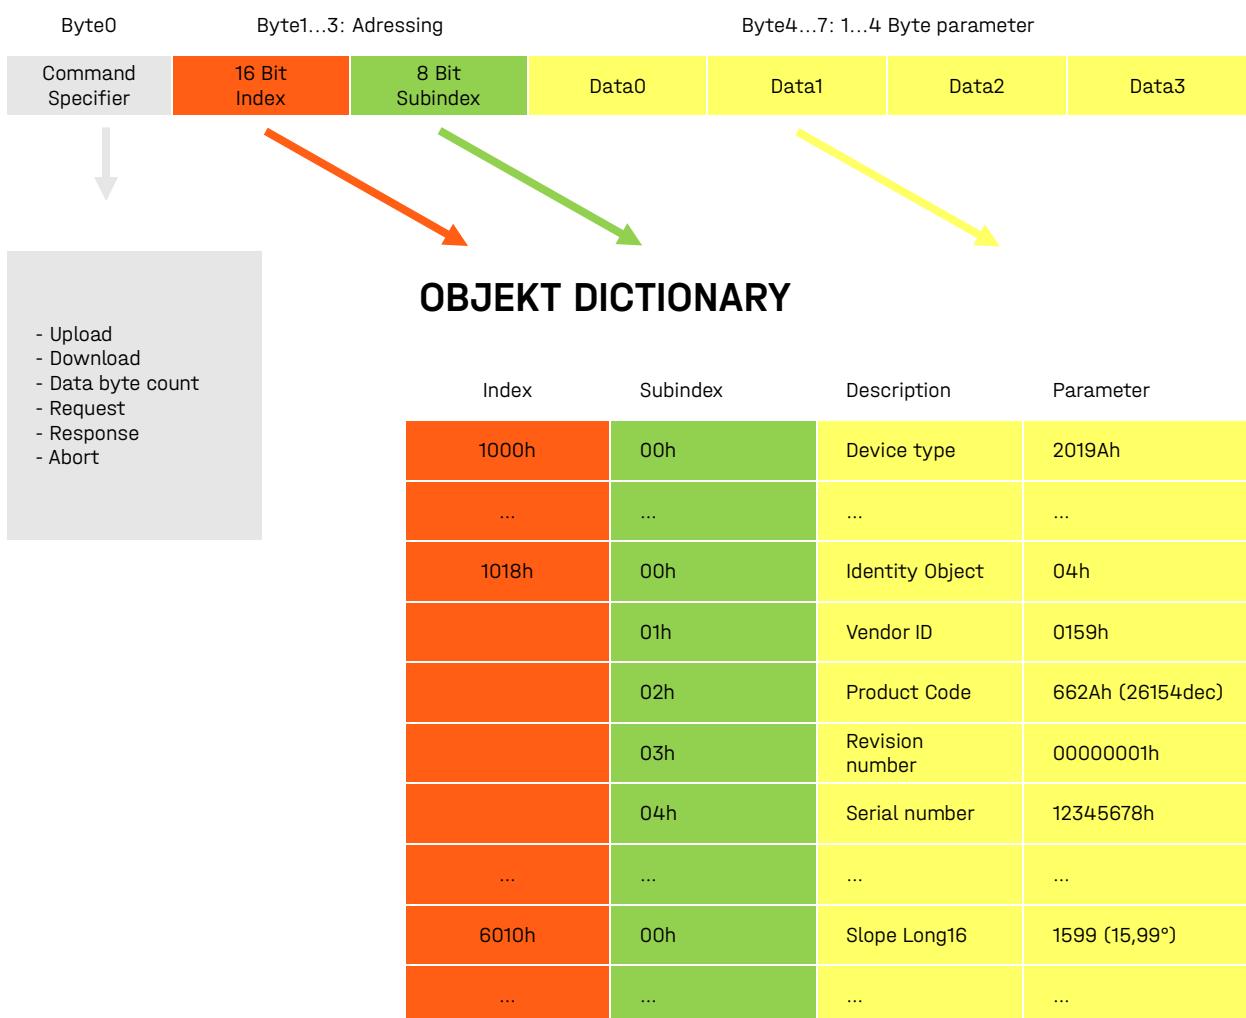


Figure 13: SDO Protocol - Access to Object Dictionary

9.8 Object dictionary

The object directory contains all data objects that are accessible from the outside and affect the behavior of communication, application and status machines. It is divided into three parts:

- Communication specific Part (Index: 0x1000 – 0x1FFF)
- Manufacturer specific Part (Index: 0x2000 – 0x5FFF)
- Profile specific Part (Index: 0x6000 – 0x9FFF)

All parameters in the object dictionary can be read and written using the standard SDO via index and Sub-Index.

The following sections describe all the parameters in the object dictionary of the sensor with index, sub-index, data type, access rights and default (factory setting). The column "Save" indicates whether a parameter in the internal volatile memory ("save" signature in OD-Write Index 1010h/01h) can be saved.

9.8.1 Communication parameters (according to CiA DS-301)

Index	Sub-Index	Parameter	Data-type	Access	Default value	Save
1000h	0	Device Type (Device profile 410)	UNS32	const	2019Ah	
1001h	0	Error Register	UNS8	ro	0	
1002h	0	Manufacturer Status Register	UNS32	ro	0	
1003h	Pre-defined Error Field					
	0	Number of Errors entries	UNS32	rw	0	
	1..5	Error Code (oldest error on highest index)	UNS32	ro	0	
1005h	0	COB-ID Sync Message	UNS32	rw	80h	
1008h	0	Manufacturer Device Name	VSTR	const	{type dep.}	
100Ah	0	Manufacturer Software Version („Vxx.yy“)	VSTR	const	{type dep.}	
100Ch	0	Guard Time (Multiple of 1 ms)	UNS16	rw	0	x
100Dh	0	Life Time Factor	UNS8	rw	0	x
1010h	Store parameters (Signature: 's'-'a'-'v'-'e' - 65766173h at SubIndex 1...4)					
	0	Largest supported SubIndex	UNS32	ro	4	
	1	Restore all Default Parameters (OV: 0x1000-0x9FFF)	UNS32	rw	1	
	2	Restore Communication Default Parameters (OV: 0x1000-0x1FFF)	UNS32	rw	1	
	3	Restore Application Default Parameters (OV: 0x6000-0x9FFF)	UNS32	rw	1	
	4	Restore Manufacturer Default Parameters (OV: 0x2000-0x5FFF)	UNS32	rw	1	
1011h	Restore default parameters (Signature: 'l'-'o'-'a'-'d' - 64616F6Ch at SubIndex 1...4)					
	0	Largest supported SubIndex	UNS32	ro	4	
	1	Restore all Default Parameters (OV: 0x1000-0x9FFF)	UNS32	rw	1	
	2	Restore Communication Default Parameters (OV: 0x1000-0x1FFF)	UNS32	rw	1	
	3	Restore Application Default Parameters (OV: 0x6000-0x9FFF)	UNS32	rw	1	
	4	Restore Manufacturer Default Parameters (OV: 0x2000-0x5FFF)	UNS32	rw	1	
1014h	0	COB-ID Emergency Message	UNS32	ro	80h + Node-ID	
1015h	0	Inhibit Time Emergency (multiple of 100 µs)	UNS16	rw	0	x
1017h	0	Producer Heartbeat Time (multiple of 1 ms, 0 inactive)	UNS16	rw	0	x
1018h	Identity object					
	0	Largest supported SubIndex	UNS8	ro	4	
	1	Vendor-ID (Manufacturer ID: GEMAC Chemnitz GmbH)	UNS32	ro	159h	

Index	Sub-Index	Parameter	Data-type	Access	Default value	Save
	2	Product Code	UNS32	ro	{type dep.}	
	3	Revision number	UNS32	ro	1Eh	
	4	Serial number	UNS32	ro	{type dep.}	
1200h	Server SD01 Parameter					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	COB-ID Client > Server	UNS32	ro	600h + Node-ID	
	2	COB-ID Server > Client	UNS32	ro	580h + Node-ID	
1800h	Transmit PDO1 Communication Parameter					
	0	Largest supported SubIndex	UNS8	ro	5	
	1	COB-ID	UNS32	ro*	180h + Node-ID	x*
	2	Transmission Type (synchronous / asynchronous manufacturer specific)	UNS8	rw	1	x
	3	Inhibit Time between two TPDO Messages (multiple of 100 µs)	UNS16	rw	0	x
	4	Compatibility Entry	UNS8	rw	0	x
	5	Event Timer (Multiple of 1 ms, 0 inactive)	UNS16	rw	0	x
1801h	Transmit PDO2 Communication Parameter					
	0	Largest supported SubIndex	UNS8	ro	5	
	1	COB-ID	UNS32	ro*	80000280h + Node-ID	x*
	2	Transmission Type (synchronous / asynchronous manufacturer specific)	UNS8	rw	1	x
	3	Inhibit Time between two TPDO Messages (multiple of 100 µs)	UNS16	rw	0	x
	4	Compatibility Entry	UNS8	rw	0	x
	5	Event Timer (Multiple of 1 ms, 0 inactive)	UNS16	rw	0	x
1802h	Transmit PDO3 Communication Parameter					
	0	Largest supported SubIndex	UNS8	ro	5	
	1	COB-ID	UNS32	ro*	80000380h + Node-ID	x*
	2	Transmission Type (synchronous / asynchronous manufacturer specific)	UNS8	rw	1	x
	3	Inhibit Time between two TPDO Messages (multiple of 100 µs)	UNS16	rw	0	x
	4	Compatibility Entry	UNS8	rw	0	x
	5	Interval time for cyclic transmission (multiple of 1 ms, 0 deactivated)	UNS16	rw	0	x
1803h	Transmit PDO4 Communication Parameter					
	0	Largest supported SubIndex	UNS8	ro	5	
	1	COB-ID	UNS32	ro*	80000480h + Node-ID	x*

Index	Sub-Index	Parameter	Data-type	Access	Default value	Save
	2	Transmission Type (synchronous / asynchronous manufacturer specific)	UNS8	rw	1	x
	3	Inhibit Time between two TPDO Messages (multiple of 100 µs)	UNS16	rw	0	x
	4	Compatibility Entry	UNS8	rw	0	x
	5	Interval time for cyclic transmission (multiple of 1 ms, 0 deactivated)	UNS16	rw	0	x
1A00h	Transmit PDO1 Mapping Parameter					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	Mapping Entry 1	UNS32	rw	0x60100010	x
	2	Mapping Entry 2	UNS32	rw	0x60200010	x
	3	Mapping Entry 3	UNS32	rw	0	x
	4	Mapping Entry 4	UNS32	rw	0	x
	5	Mapping Entry 5	UNS32	rw	0	x
	6	Mapping Entry 6	UNS32	rw	0	x
	7	Mapping Entry 7	UNS32	rw	0	x
	8	Mapping Entry 8	UNS32	rw	0	x
1A01h	Transmit PDO2 Mapping Parameter					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	Mapping Entry 1	UNS32	rw	0x31000110	x
	2	Mapping Entry 2	UNS32	rw	0x31000210	x
	3	Mapping Entry 3	UNS32	rw	0	x
	4	Mapping Entry 4	UNS32	rw	0	x
	5	Mapping Entry 5	UNS32	rw	0	x
	6	Mapping Entry 6	UNS32	rw	0	x
	7	Mapping Entry 7	UNS32	rw	0	x
	8	Mapping Entry 8	UNS32	rw	0	x
1A02h	Transmit PDO3 Mapping Parameter					
	0	Largest supported SubIndex	UNS8	ro	3	
	1	Mapping Entry 1	UNS32	rw	0x31020110	x
	2	Mapping Entry 2	UNS32	rw	0x31020210	x
	3	Mapping Entry 3	UNS32	rw	0x31020310	x
	4	Mapping Entry 4	UNS32	rw	0	x
	5	Mapping Entry 5	UNS32	rw	0	x
	6	Mapping Entry 6	UNS32	rw	0	x
	7	Mapping Entry 7	UNS32	rw	0	x
	8	Mapping Entry 8	UNS32	rw	0	x
1A03h	Transmit PDO4 Mapping Parameter					

Index	Sub-Index	Parameter	Data type	Access	Default value	Save
	0	Largest supported SubIndex	UNS8	ro	3	
	1	Mapping Entry 1	UNS32	rw	0x31020110	x
	2	Mapping Entry 2	UNS32	rw	0x31020210	x
	3	Mapping Entry 3	UNS32	rw	0x31020310	x
	4	Mapping Entry 4	UNS32	rw	0	x
	5	Mapping Entry 5	UNS32	rw	0	x
	6	Mapping Entry 6	UNS32	rw	0	x
	7	Mapping Entry 7	UNS32	rw	0	x
	8	Mapping Entry 8	UNS32	rw	0	x
1F51h	Download Program Control					
	0	Largest supported SubIndex	UNS8	ro	1	
	1	Area Firmware	UNS8	rw	1	
1F80h	0	Self-Starting Device (bit 3) only writing and deleting of bit 3 (value 8h) allowed	UNS32	rw	0	x

* The valid Bit (Bit 31) of COB-ID is saved

Table 25: Communication Parameters in the Object Dictionary

9.8.1.1 Error register (1001h)

The error register displays the general error state of the device. Each bit stands for an error group. If one bit is set (= 1), at least one error of that specific group occurred. The content of this register is transmitted in each EMCY object. The following error groups may occur:

Error register (1001h)							
Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
Manufacturer Specific Error	Accuracy Warning	Profile Specific Error	Communication Error	unused			at least one active fault

Table 26: Error register (1001h)

If the device is in error state (at least one active error) this is shown by the set Bit0 (= 1). In case of a communication error (overflow of the transmit / receive buffers, guarding errors or CAN controller in passive mode / Bus-Off) the Bit4 is set. A device profile specific error (sensor error) is shown by Bit5. The Bit7 indicates a vendor-specific error (EEPROM error).

9.8.1.2 Manufacturer status register (1002h)

This Register shows the recent state of all detectable errors. Here each bit represents a specific error. If a bit is set (= 1), this error is active at that moment. The lower 16 bits of this register (Bit15...Bit0) are transmitted in the first two bytes of the manufacturer specific part of each EMCY object and are also registered in the additional information field (Bit31-Bit16) of the Pre-defined Error Field 1003h. The definitions of the individual bits in the bit fields "Device Error" and "Communication Error" are shown in Table 37.

Manufacturer status register (1002h)		
Bit31...Bit16	Bit15...Bit8	Bit7...Bit0
unused	Bit field Communication Error	Bit field Device Error

Table 27: Manufacturer status register (1002h)

9.8.1.3 Pre-defined error field (1003h)

Each sensor has an error list holding the last five errors. The entry 1003h/00h contains the number of error entries in the error field. The other subindices contain all occurred error states in chronological order. The last error occurred is always located at SubIndex 01h. The oldest error can be found in the largest available SubIndex (value of 1003h/00h) and will be the first to be deleted from the list with occurrence of more than five errors. If a new error occurs a new error entry is added in 1003h and the master is notified by an EMCY object. An error entry is structured as follows:

Error entry in pre-defined error field (1003h)																			
Additional information field (Bit31...Bit16)	Error code (Bit15...Bit0)																		
Bit15...Bit0 of the manufacturer status register 1002h (at the moment of error occurrence)	<table> <tr> <td>0000h</td> <td>Error reset or no error present</td> </tr> <tr> <td>5000h</td> <td>EEPROM error</td> </tr> <tr> <td>5010h</td> <td>Sensor Error X</td> </tr> <tr> <td>5020h</td> <td>Sensor Error Y</td> </tr> <tr> <td>5040h</td> <td>Accuracy warning / measuring range exceeded</td> </tr> <tr> <td>8110h</td> <td>Overflow of the transmit / receive buffers</td> </tr> <tr> <td>8120h</td> <td>CAN Warning Limit reached</td> </tr> <tr> <td>8130h</td> <td>Node Guard Event</td> </tr> <tr> <td>8140h</td> <td>Recovered from Bus-Off</td> </tr> </table>	0000h	Error reset or no error present	5000h	EEPROM error	5010h	Sensor Error X	5020h	Sensor Error Y	5040h	Accuracy warning / measuring range exceeded	8110h	Overflow of the transmit / receive buffers	8120h	CAN Warning Limit reached	8130h	Node Guard Event	8140h	Recovered from Bus-Off
0000h	Error reset or no error present																		
5000h	EEPROM error																		
5010h	Sensor Error X																		
5020h	Sensor Error Y																		
5040h	Accuracy warning / measuring range exceeded																		
8110h	Overflow of the transmit / receive buffers																		
8120h	CAN Warning Limit reached																		
8130h	Node Guard Event																		
8140h	Recovered from Bus-Off																		
Bitfield Communication error	Bitfield Device error																		

Table 28: Error entry in pre-defined error field (1003h)

The error list can be reset completely by writing "0" to entry 1003h/00h.

9.8.1.4 Saving (1010h) and Loading (1011h) of parameters

If parameters are changed in the object dictionary those changes will take effect immediately. To ensure the changed parameters are still active after Reset they have to be saved in the internal EEPROM. By writing the signature „save“ (65766173h) to the entry 1010h/01h all the current parameters of the object dictionary will be saved in the internal permanent memory.

The object dictionary can be reset to its default settings by writing the signature „load“ (64616F6Ch) into the entry 1011h/01h. By doing this the factory parameters are written in the permanent memory. After a „Reset Application“ (NMT command) or a hardware reset the changes will take effect (a „Reset Communication“ (NMT command) effects the communication parameters only).

By writing the signature on SubIndex: 02h, 03h or 04h, it is possible to store or load only parts of the object directory.

9.8.1.5 Transmit PDO - Transmission type (1800h / 1801h / 1802h / 1803h)

The SubIndex 02h can be used to define how the sending of the PDO is triggered.

Transmit PDO - Transmission type	
Transmission type	Description
1...240	Synchronous (cyclic) Transmission after each 1...240 reception of a SYNC message only „Synchronized Transmission“ via SYNC possible
253	Transmission with RTR only
254	Asynchronous, manufacturer-specific „Cyclo Transmission“ and/or „Transmission on Inclination Change“ (TPD01 only) activated by appropriate configuration

Table 29: Transmit PDO - Transmission type

9.8.2 Manufacturer specific part

Index	Sub-Index	Parameter	Daten-typ	Zu-griff	Standard-wert	Spei-cher-n
2002h	0	Automatic Bus-Off Recovery	BOOL	rw	0	x
3000h	Low pass filter settings					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	Filter type (0=off, 1=Butterworth, 2=critical damped)	UNS16	rw	2	x
	2	Cut-off frequency digital filter (100...25000/8000, in mHz)	UNS16	rw	5000	x
3001h	TPD01 Transmission on inclination change					
	0	Largest supported SubIndex	UNS8	ro	3	
	1	Enable/Disable (1/0) transmission on inclination change	UNS16	rw	0	x
	2	min. inclination change for longitudinal (X) axis (in 1/100°)	UNS16	rw	100	x
	3	min. inclination change for lateral (Y) axis (in 1/100°)	UNS16	rw	100	x
3002h	Sensor fusion configuration					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	Enable/Disable (1/0) sensor fusion algorithm	UNS8	rw	1	x
	2	Maximum time of disturbance suppression (in ms)	UNS16	rw	5000	x
	3	Activate/deactivate automatic drift compensation (1/0)	UNS8	rw	1	x
	4	Trigger manual drift compensation (by writing 1)	UNS8	w	0	
	5	Sensitivity for automatic drift compensation	UNS8	rw	3	x
	7	Damping factor (valid range: 0 ... 20)	UNS8	rw	17	x
3100h	Euler angle output					
	0	Largest supported SubIndex	UNS8	ro	2	
	1	Euler angle Pitch (in %/100)	INT16	ro	-	
	2	Euler angle Roll (in %/100)	INT16	ro	-	
3102h	Acceleration output					
	0	Largest supported SubIndex	UNS8	ro	3	
	1	Acceleration x axis (in 1/16384 g)	INT16	ro	-	
	2	Acceleration y axis (in 1/16384g)	INT16	ro	-	

Index	Sub-Index	Parameter	Daten-typ	Zu-griff	Standard-wert	Spei-cher-n
	3	Acceleration z axis (in 1/16384g)	INT16	ro	-	
	4	Unfiltered acceleration x axis (in 1/16384g)	INT16	ro	-	
	5	Unfiltered acceleration y axis (in 1/16384g)	INT16	ro	-	
	6	Unfiltered acceleration z axis (in 1/16384g)	INT16	ro	-	
3103h	Raw data output angular rate sensor					
	0	Largest supported SubIndex	UNS8	ro	3	
	1	Angular rate x axis (in 7/800 °/s)	INT16	ro	-	
	2	Angular rate x axis (in 7/800 °/s)	INT16	ro	-	
	3	Angular rate x axis (in 7/800 °/s)	INT16	ro	-	
3104h	Gyro angle output					
	0	highest supported subindex	UNS8	ro	3	
	1	Gyro angle x axis (in 1/100°)	INT16	ro	-	
	2	Gyro angle y axis (in 1/100°)	INT16	ro	-	
	3	Gyro angle z axis (in 1/100°)	INT16	ro	-	
3105h	Output static angles					
	0	highest supported subindex	UNS8	ro	-	
	1	perpendicular angle: longitudinal (x axis, in 1/100°)	INT16	ro	-	
	2	perpendicular angle: lateral (y axis, in 1/100°)	INT16	ro	-	
	3	Euler angle: Pitch (in 1/100°)	INT16	ro	-	
	4	Euler angle: Roll (in 1/100°)	INT16	ro	-	
5555h	Reserved index (access for manufacturer only)					

Table 30: Manufacturer Specific part of the object dictionary

9.8.2.1 Automatic Bus-Off Recovery (2002h)

This property determines the behavior of the sensor when it is in the state Bus-Off. If enabled, the sensor, which is in Bus-Off state may become error-active (no longer Bus-Off) with its error counters both set to zero after having monitored 128 occurrences of 11 consecutive recessive bits on the bus.

If disabled, the sensor remains in Bus-Off state.

9.8.2.2 Low Pass Filter Settings (3000h)

Through the entry 3000h/01h the filter type will be selected. The cut-off frequency is programmable through the object 3000h/02. Values for the cut-off frequency are allowed between 100 (= 0.1 Hz) and 25000/8000 (= 25 Hz/8 Hz). A description of the digital filter can be found in section 7.1 "Low pass filter".

Filter	Filter type (3000h/01h)	Adjustable frequency range (3000h/02h)	Filtertyp
deactivated	0	-	static inclination measurement for applications without external forces

Filter	Filter type (3000h/01h)	Adjustable frequency range (3000h/02h)	Filtertyp
Butterworth	1	0,1 Hz ... 25 Hz	Static inclination measurement with high damping to vibration
Critically damped	2	0,1 Hz ... 8 Hz	Inclination measurement in applications that requires a certain dynamism, without overshoot at angle changes with good damping

Table 31: Filter selection

9.8.2.3 TPD01 Transmission on inclination change (3001h)

Through the entry 3001h/01h the event controlled transmission of the TPD01 on inclination change can be enabled (= 1) or disabled (= 0). For the activation the transmission type of TPD01 must be set to "Asynchronous, manufacturer-specific" (1800h/02h = 254).

Subindices 02h and 03h offer the separated setting of the minimum necessary inclination change for the longitudinal (X) and lateral (Y) axis.

The angle values are mentioned in °/100 (100fold angle value) and can be set freely from 1 = 0.01° to maximum.

If this function is enabled the sensor outputs the TPD01 object in the state OPERATIONAL in case of inclination changes of the longitudinal and/or the lateral axis greater than set under 3001h/02h and 03h. During operation the angle difference between the recent inclination value and the last one sent by the TPD01 is permanently calculated and checked. With each change to the state OPERATIONAL the sensor posts the recent position by the TPD01 object, too (only if 3001h/01h = 1).

Remarks:

If small inclination differences are set under 3001h/02h and 03h it is recommended to enable the low pass filter (index 3000h) and the sensor fusion filter (index 3002h) to reduce the influence of vibrations and the frequent output of the TPD01.

9.8.2.4 Configuration of the sensor fusion (3002h)

The subindices of the object 3002h are available for the configuration of the sensor fusion filter (see chapter 7.2 „Sensor fusion filter“). SubIndex 01h enables the activation and deactivation of the sensor fusion. The interference suppression time is configured under 3002h / 02h. SubIndex 03h to 05h configure the drift compensation for the gyro data. For the extended configuration, there are SubIndex 06h for activating or de-activating the adaptive damping and SubIndex 07h for setting the damping factor (see Table 5).

9.8.3 Device profile specific part (according to CiA DS-410)

Index	Sub-Index	Parameter	Data-type	Access	Default value	Save
6000h	0	Resolution (multiple of 0.001°)	UNS16	ro	10	
6010h	0	Inclination value longitudinal (X-axis, 100fold angle value in °)	INT16	ro	-	
6011h	0	Operating Parameter longitudinal (Inversion, Zero Point Adjustment)	UNS8	rw	0	x
6012h	0	Preset Value longitudinal x axis	INT16	rw	0	x

Index	Sub-Index	Parameter	Data-type	Access	Default value	Save
6013h	0	Offsetwert für longitudinale (X) Achse	INT16	rw	0	x
6014h	0	Differential Offset Value longitudinal x axis	INT16	rw	0	x
6020h	0	Inclination value lateral (y axis, 100fold angle value in °)	INT16	ro	-	
6021h	0	Operating Parameter lateral (Inversion, Zero Point Adjustment)	UNS8	rw	0	x
6022h	0	Preset Value lateral y axis	INT16	rw	0	x
6023h	0	Offset Value lateral y axis	INT16	rw	0	x
6024h	0	Differential Offset Value lateral y axis	INT16	rw	0	x
6511h	0	Temperature (internal in °C)	INT8	ro	-	

Table 32: Device profile specific part of the object dictionary

9.8.3.1 Resolution (6000h)

The resolution of the sensor is constantly set to 0.01° (default: 10 * 0.001°). All angle values in the object dictionary (6010h, 6012h, 6013h, 6014h and 6020h, 6022h, 6023h, 6024h) are to be interpreted as a multiple of 0.01°.

Example: inclination value = $-2370 \times 0.01^\circ = -23.70^\circ$

9.8.3.2 Inclination values axial (6010h) / Inclination values longitudinal and lateral (6010h and 6020h)

The recent inclination values of the inclination axis are accessible by SDO access to the object dictionary (in each device state) as well as by TPDO. If Zero Point Adjustment is enabled via the operating parameters 6011h and 6021h, the inclination value is calculated as follows:

$$\text{Inclination Value} = \text{Physically Measured Inclination Value} + \text{Diff. Offset Value} + \text{Offset Value}$$

On disabled Zero Point Adjustment:

$$\text{Inclination Value} = \text{Physically Measured Inclination Value}$$

Example: Value range: -9000 ... +9000 → - 90.00° ... + 90.00°

9.8.3.3 Operating parameters (6011h and 6021h)

The operating parameters settings of a sensor (6011h and 6021h) allow the changing of the mathematical sign of the inclination value and a Zero Point Adjustment. On Factory Default Settings, these options are disabled, i.e. the direction of the inclination value (polarity of the axis) corresponds to the one shown on the nameplate of the sensor (see Figure 1).

Operating parameters (6011h and 6021h)							
Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
unused						Zero Point Adjustment 0 = inactive 1 = active	Inversion 0 = inactive 1 = active

Table 33: Operating parameters (6011h and 6021h)

The inversion of the inclination values affects the sign of the output of the perpendicular angle and the Euler angle. All other output data are not affected.

9.8.3.4 Zero point adjustment for perpendicular angles: Preset Value, Offset Value, Differential Offset Value (60x1/2/3h)

Using the values "Preset Value", "Offset Value" and "Differential Offset Value" the adjustment of the Zero Point of inclination value (perpendicular angle) is possible. The Zero Point Adjustment is only active if the Bit1 in the operating parameters (6011h/6021h) is set.

The zero point setting does not affect the output of the Euler angles.

Value	Object	Description
Preset Value	6012h 6022h	Preset Value for Zero Point Adjustment, value range depends on settings in object 6000h
Offset Value	6013h 6023h	Calculated Offset Value when writing to object 6012h or 6021h Calculated Offset Value = Preset Value at tacc - physically measured Inclination Value at tacc - Differential Offset Value tacc: time when accessing object (6012h, 6022h)
Differential Offset Value	6014h 6024h	Additional Offset, regardless of object 6012h and 6013h / 6022h and 6023h. The value you enter here will be added up directly to the inclination value.

Table 34: Zero point adjustment

9.9 Emergency objects

Each inclination sensor supports EMCY objects which are transmitted in case of sensor and hardware errors. If such an error occurs the OD entries 1001h (Error Register), 1002h (Manufacturer Status Register) and 1003h (Pre-defined Error Field) are updated. After abolishment of an error, the device transmits an emergency message with the Error Reset Code 0x0000. Remaining errors are signaled in Byte2 (Error Register) and Bytes 3 and 4 in the Manufacturer specific error field. Once the device is error-free, it sends an emergency message which contains only zeros. The current state of the device (Pre-Operational, Operational or Stopped) is not influenced by the error states, except in case of a guarding error.

Emergency messages are sent with high priority on the bus and are always 8 bytes long. The structure of the telegram is shown in Table 35:

Emergency object								
Byte0	Byte1	Byte2	Byte3	Byte4	Byte5	Byte6	Byte7	
Emergency Error Code		Error Register (1001h)	Manufacturer specific error field					
			Bit field Communication Error	Bit field Device Error	0x00	0x00	0x00	

Table 35: Emergency object

Emergency Error Codes	
0x0000	Ein Fehler wurde rückgesetzt oder kein Fehler mehr vorhanden (Error Register = 0)
0x5000	EEPROM Fehler, Fehler beim Speichern der Konfiguration
0x5010	Error Reset or no Error (Error Register = 0)
0x5020	EEPROM error, error when saving the configuration

Emergency Error Codes	
0x5040	Sensor Error x axis
0x8110	Sensor Error y axis
0x8120	Accuracy warning, acceleration or angular rate values are out of range, inclination accuracy of the sensor is limited
0x8130	Overflow of the transmit / receive buffers, CAN messages were lost
0x8140	CAN Warning Limit reached

Table 36: Emergency error codes

Bit field device errors	
0x01	Sensor Error x axis
0x02	Sensor Error y axis
0x80	EEPROM Error: An error occurred while saving the configuration.
Bit field communication errors	
0x01	CAN Warning Limit reached (too many Error Frames)
0x02	CAN Bus-Off State reached. An Emergency message will be transmitted after the device has recovered from Bus-Off.
0x04	Receive Queue Overrun, CAN messages were lost
0x08	Transmit Queue Overrun, CAN messages were lost
0x80	Guarding Error, The loss of the Guarding-Master has been detected (Node Guard Event)

Table 37: Emergency: Manufacturer specific error field

9.10 Failure monitoring

Since the nodes do not respond at regular intervals with the event-controlled transmission in a CANopen network, Heartbeat and Nodeguarding / Lifeguarding failure monitoring mechanisms are provided. Only one of the two monitoring methods can be active.

9.10.1 Nodeguarding / Lifeguarding

Nodeguarding is the monitoring of one or several nodes by the NMT master. The NMT master periodically sends a RTR telegram to the slave to be monitored, which responds with its status and a toggle bit. If the status or the toggle bit do not comply with the status or toggle bit expected by the guarding master or if no response is provided, the master assumes a slave error.

The node to be monitored may also use this mechanism to detect a failure of the guarding master. Therefore two parameters are used. The interval time after which the guarding master polls the sensor to be monitored is the Guard Time (100Ch). Another parameter, the Life Time Factor (100Dh), defines a multiplier after which the connection is deemed to be interrupted. This time is designated as the node life time.

$$\text{„Node Life Time“} = \text{„Guard Time“} \times \text{„Life Time Factor“}$$

If the sensor does not receive a guarding request from the master within the parametrized time, it also assumes a master failure, sends an emergency telegram and returns to the "Pre-Operational" state. If either of the two parameters is "0" (default setting), the master is not monitored (no Lifeguarding).

9.10.2 Heartbeat

Heartbeat is a failure monitoring mechanism which can operate without using RTR telegrams. In this case, the sensor cyclically transmits a heartbeat message which contains the state of the device. The master can monitor these telegrams. Heartbeat is activated once a value greater than "0" is entered in the heartbeat interval time register (1017h).

Remarks:

Heartbeat has a significant influence on the bus load of the CANopen network, but produces only half the bus load of Nodeguarding / Lifeguarding.

9.11 LSS: Layer Setting Service (according to CiA DSP-305)

9.11.1 Setting of Node-ID and Baud rate

The setting of the node address (Node-ID) and the Baud Rate is realized by LSS (Layer Setting Service). For communication between LSS Master and LSS Slave (sensor) two CAN identifiers (7E5h and 7E4h) are used. Each sensor has a unique 128-bit LSS address, at which it can be addressed in the CAN network. This address is composed of the three 32-bit parameters of the Identity object 1018h and the serial number:

Vendor-ID	0000 0159h	(Manufacturer ID: GEMAC Chemnitz GmbH)
Product Code	0000 6DE8Ah	(6DE8h = 28136dec = PR- 28136-00)
Revision Number	0000 0000h	(00h = 0dec = PR- 28136-00)
Serial Number	xxxx xxxxh	(serial number of the sensor → nameplate)

The default values for Node-ID and Baud Rate at delivery (factory settings) are:

Node-ID	10
Baud rate	automatic Baud rate detection

Index	Baud rate
0	1 MBit/s
1	800 kBit/s
2	500 kBit/s
3	250 kBit/s
4	125 kBit/s
5	unused
6	50 kBit/s
7	20 kBit/s
8	10 kBit/s
9	automatic baud rate detection

Table 38: LSS Baud rate index according to CiA DSP-305

9.12 Automatic Baud Rate Detection (according to CiA AN-801)

The automatic baud rate detection is used to automatically adjust the baud rate of the sensor on the existing baud rate in the network. For this purpose, after switching on the power supply, the sensor is in the so-called "Listen-Only" mode, in which it observes the telegrams on the CAN-bus but does not give any acknowledge itself. The sensor checks all the available baud rates. Upon reception of a valid CAN telegram, the correct baud rate is adjusted. Then the sensor starts up, sends its boot-up message and enters the Pre-Operational state. (see also Figure 12).

Remarks:

For proper operation of the automatic baud rate detection it is necessary to receive messages from other can nodes on the bus.

10 Functional description SAE J1939 interface

10.1 Telegram format

SAE J1939 uses extended identifiers (29 bit) for CAN-bus communication. A general distinction can be made between telegrams that are exchanged between two participants with direct addressing (PDU format 1) and Broadcast messages that are sent to all participants on the bus (PDU format 2).



Figure 14: SAE J1939 CAN-Identifier

Point-to-point messages are sent with a PDU format value of 00h to EFh and a specific destination address. Broadcast messages contain the PDU format values F0h to FFh. The field group extension increases the number of available broadcast messages.

The sensor supports broadcast messaging with PDU format 2 for sending process data (like angle values or raw sensor data, see section 10.3 „Process data (Transmit PGNs)“). For configuration of the sensor, direct addressing with PDU format 1 and proprietary A PGN is used (see section 10.5 „Sensor“).

10.2 Device name and address

With factory default setting, the sensor starts with a device address of 128 (80h). Dynamic addressing is supported. After power-on, the sensor transmits an address-claim telegram containing the used address and the 64 bit device name, which identifies the sensor uniquely on the bus. The device name also defines the priority of the sensor in the network.

The 64 bit device name contains the following fields:

- Arbitrary Address Capable, support of dynamic addressing (1 bit)
- Industry Group (3 bit)
- Vehicle System Instance (4 bit)
- Vehicle System (7 bit)
- Function (8 bit)
- Function Instance (5 bit)
- ECU Instance (3 bit)
- Manufacturer Code (11 bit)
- Identity Number (21 bit)

The Manufacturer Code is the identifier of GEMAC Chemnitz GmbH (value 854 decimal). The Identity Number is the SAE J1939 serial number of the sensor.

The following fields are set to fixed factory settings:

- Manufacturer Code: 854 (GEMAC Chemnitz GmbH)
- Identity Number: SAE J1939 unique serial number of the sensor
- Industry Group: 0
- Vehicle System: 0
- Function: 145 (Inertial Sensor)

All other fields of the device name can be changed by the user by configuration messages (see section 10.5 „Sensor configuration“).

10.3 Process data (Transmit PGNs)

For sending of measurement values, the sensor supports the standardized PGNs 61459 (Slope Sensor Information) and 61481 (Slope Sensor Information 2) as well as PGN 61482 (Angular Rate Information) and PGN 61485 (Acceleration Sensor). Additionally, Proprietary B messages (broadcast) are supported.

The device supports different parameter groups (TxPGNs):

- TxPGN1 61459 Slope Sensor Information
- TxPGN2 61481 Slope Sensor Information 2 (extended range)
- TxPGN3 61482 Angular Rate Information
- TxPGN4 61485 Acceleration Sensor
- Proprietary B TxPGN5 65280 perpendicular angle longitudinal (x-axis) and lateral (y-axis)
- Proprietary B TxPGN6 65281 Euler angles pitch and roll
- Proprietary B TxPGN8 65283 acceleration x, y, z
- Proprietary B TxPGN9 65284 angular rate x, y, z
- Proprietary B TxPGN10 65285 Acceleration unfiltered x, y, z
- Proprietary B TxPGN11 65286 gyro angle x, y, z

The activation/deactivation of transmission, the cycle time, and the priority of the messages, as well as the LSB of the PG number for the Proprietary B PGNs, can be set via configuration messages. By default, TxPGN5 (perpendicular angle) is activated with a cycle time of 10 ms.

The content of the Proprietary B PGNs can be adapted by the user by mapping the signals. The following tables show the standard assignments:

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
61459	Slope Sensor Information	Pitch angle	0	16	0.002°/bit	-64°	-64...64.51°
		Roll angle	16	16	0.002°/bit	-64°	-64...64.51°
		Pitch rate	32	16	0.002°/s/bit	-64°/s	-64...64.51°/s
		Pitch angle Figure of Merit	48	2	4 States	0	0...3
		Roll angle Figure of Merit	50	2	4 States	0	0...3
		Pitch rate Figure of Merit	52	2	4 States	0	0...3

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
		Sensor fusion status	54	2	4 States	0	0...3
		Latency	56	8	0.5 ms/bit	0	0...125 ms

Table 39: Transmit PGN 1 - 61459 Slope Sensor Information

Latency describes only the internal latency of the sensor and is defined as the time between data acquisition in the sensor and output to the CAN interface. No account is taken of additional latencies caused by the CAN bus and the general system implementation.

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
61481	Slope Sensor Information 2	Pitch angle (ext. Range)	0	24	1/32768°/bit	-250°	-250...252° (-90...90°)
		Roll angle (ext. Range)	24	24	1/32768°/bit	-250°	-250...252°
		Pitch angle sensor fusion	48	2	4 States	0	0...3
		Pitch angle Figure of Merit	50	2	4 States	0	0...3
		Roll angle sensor fusion	52	2	4 States	0	0...3
		Roll angle Figure of Merit	54	2	4 States	0	0...3
		Latency	56	8	0.5 ms/bit	0	0...125 ms

Table 40: Transmit PGN 2 - 61481 Slope Sensor Information 2

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
61482	Angular Rate Information	Pitch angle (ext. Range)	0	16	1/128°/s/bit	-250°/s	-250...250°/s
		Roll angle (ext. Range)	16	16	1/128°/s/bit	-250°/s	-250...250°/s
		Yaw Rate (ext. Range)	32	16	1/128°/s/bit	-250°/s	-250...250°/s
		Pitch angle Figure of Merit	48	2	4 States	0	0...3
		Roll angle sensor fusion	50	2	4 States	0	0...3
		Yaw Rate Figure of Merit	52	2	4 States	0	0...3
		Latency	56	8	0.5 ms/bit	0	0...125 ms

Table 41: Transmit PGN 3 - 61482 Angular Rate Information

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
61485	Acceleration Sensor	Lateral Acceleration (y axis)	0	16	0.01 m/s²/bit	-320m/s²	-80...80m/s²
		Longitudinal Acceleration	16	16	0.01 m/s²/bit	-320m/s²	-80...80m/s²

PGN	Name	SPN name	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
		(x axis)					
		Vertical Acceleration (z axis)	32	16	0.01 m/s ² /bit	-320m/s ²	-80...80m/s ²
		Lateral Acceleration Figure of Merit	48	2	4 States	0	0...3
		Longitudinal Acceleration Figure of Merit	50	2	4 States	0	0...3
		Vertical Acceleration Figure of Merit	52	2	4 States	0	0...3
		Support variable transmission repetition rate	54	2	4 States	0	0...3

Table 42: Transmit PGN 4 - 61485 Acceleration Sensor

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65280	Proprietary B TxPGN5 perpendicular angle	Inclination angle longitudinal (x axis)	1	0	16	0.01°/bit	0°	-90...90°
		Inclination angle lateral (y axis)	2	16	16	0.01°/bit	0°	-90...90°
		Static inclination value longitudinal (x axis)	22	32	16	0.01°/bit	0°	-90...90°
		Static inclination value lateral (y axis)	23	48	16	0.01°/bit	0°	-90...90°

Table 43: Transmit PGN 5 - Perpendicular angle

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65281	Proprietary B TxPGN6 Euler angles	Euler angle Pitch	3	0	16	0.01°/bit	0°	-90...90°
		Euler angle Roll	4	16	16	0.01°/bit	0°	-180...180°
		Static Euler angle Pitch	24	32	16	0.01°/bit	0°	-90...90°
		Static Euler angle Roll	25	48	16	0.01°/bit	0°	-180...180°

Table 44: Transmit PGN 6 - Euler angles

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65283	Proprietary B TxPGN8 Acceleration	Acceleration x axis	10	0	16	1/16384 / bit	0	-2g...2g
		Acceleration y axis	11	16	16	1/16384 / bit	0	-2g...2g
		Acceleration z axis	12	32	16	1/16384 / bit	0	-2g...2g

Table 45: Transmit PGN 8 - Acceleration

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65284	Proprietary B TxPGN9 Angular rate	Angular rate x axis	16	0	16	7/800°/s / bit	0	-250...250°/s
		Angular rate y axis	17	16	16	7/800°/s / bit	0	-250...250°/s
		Angular rate z axis	18	32	16	7/800°/s / bit	0	-250...250°/s

Table 46: Transmit PGN 9 - Angular rate

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65285	Proprietary B TxPGN10 unfiltered acceleration	Acceleration x axis unfiltered	13	0	16	1/16384 / bit	0	-2g...2g
		Acceleration y axis unfiltered	14	16	16	1/16384 / bit	0	-2g...2g
		Acceleration z axis unfiltered	15	32	16	1/16384 / bit	0	-2g...2g

Table 47: Transmit PGN 10 - Unfiltered acceleration

PGN	Name	SPN name	SPN No.	SPN position (bit)	SPN size (bit)	Resolution	Offset	Data range
65286	Proprietary B TxPGN11 Gyro angle	Gyro angle x axis	19	0	16	0.01° / bit	0°	-180°..180°
		Gyro angle y axis	20	16	16	0.01° / bit	0°	-180°..180°
		Gyro angle z axis	21	32	16	0.01° / bit	0°	-180°..180°

Table 48: Transmit PGN 11 - Gyro angle

The meaning of the status bits of the output values described in the PGNs is explained in Table 49.

Condition of the status bits	Meaning
00	The described datum is valid and within the specification of the sensor.
01	The forces acting on the sensor are outside of the specification. The datum described is invalid.
10	Error
11	Not available

Table 49: Status Bits in the PGN

10.4 PGN Mapping

The content of the proprietary B PGNs can be adapted by mapping. For this purpose, an SPN (1 byte) is assigned to each signal that can be output. Up to 4 signals can be mapped per PGN. The signals available for mapping are listed in Table 50. The configuration is carried out using the corresponding telegrams listed in chapter 10.5 „Sensor configuration“.

SPN	Name	Format	Resolution	Data range
0	Not used	-	-	0
1	Perpendicular angle X	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
2	Perpendicular angle Y	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
3	Euler angle: Pitch	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
4	Euler angle: Roll	16bit signed	0.01 deg/bit	-180.00° ... 180.00°
10	Acceleration: x	16bit signed	1/16384 g/bit	-2g ... 2g
11	Acceleration: y	16bit signed	1/16384 g/bit	-2g ... 2g
12	Acceleration: z	16bit signed	1/16384 g/bit	-2g ... 2g
13	Acceleration unfiltered: x	16bit signed	1/16384 g/bit	-2g ... 2g
14	Acceleration unfiltered: y	16bit signed	1/16384 g/bit	-2g ... 2g
15	Acceleration unfiltered: z	16bit signed	1/16384 g/bit	-2g ... 2g
16	Angular Rate: x	16bit signed	7/800 deg/s/bit	-250°/s ... 250°/s
17	Angular Rate: y	16bit signed	7/800 deg/s/bit	-250°/s ... 250°/s
18	Angular Rate: z	16bit signed	7/800 deg/s/bit	-250°/s ... 250°/s
19	Gyro angle: x	16bit signed	0.01 deg/bit	-180.00° ... 180.00°
20	Gyro angle: y	16bit signed	0.01 deg/bit	-180.00° ... 180.00°
21	Gyro angle: z	16bit signed	0.01 deg/bit	-180.00° ... 180.00°
22	Perpendicular angle X (Z) static	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
23	Perpendicular angle Y static	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
24	Euler angle Pitch static	16bit signed	0.01 deg/bit	-90.00° ... 90.00°
25	Euler angle Roll static	16bit signed	0.01 deg/bit	-180.00° ... 180.00°
26	Temperature	16bit signed	0.1 K//bit	-40.0 °C ... 100.0 °C

Table 50: SAE J1939 proprietary B mapping signals

10.5 Sensor configuration

For reading and writing the sensor configuration, proprietary A PGN 61184 (point-to-point messaging) is used. The data part of the telegram has the following structure:

D0	D1	D2	D3	D4	D5	D6	D7
INDEX	CMD	STATUS	DATA0	DATA1	DATA2	DATA3	

INDEX Parameter index (see Table 51)

CMD Command (0x01: read, 0x02: write)

STATUS Status (only valid in reply from sensor, see Table 54)

DATA0...DATA3 0 to 4 bytes of data (valid number of bytes depends on the parameter index)

Index	Parameter	Data type	Value	Access
0x1000	Vendor-ID	UNS32	-	ro
0x1001	Product-ID	UNS32	-	ro
0x1002	Product revision	UNS32	-	ro
0x1003	Serial number	UNS32	-	ro
0x1004	Firmware version	UNS16	-	ro
0x1005	Device-ID	UNS32	-	
0x1100	Device status	UNS8	-	ro
0x2000	CAN baudrate	UNS16	0: Autobaud 250 (default) 10, 20, 50, 100, 125, 500, 800, 1000	rw
0x2001	Device address	UNS8	128 (default)	rw
0x2002	Automatic Bus-Off Recovery	UNS8	0: (default) inactive 1: active	rw
0x2010	Arbitrary Address Capable	UNS8	0: address claiming inactive 1: address claiming active (default)	rw
0x2011	Industry Group	UNS8	0	ro
0x2012	Vehicle system instance	UNS8	0...15 (default: 0)	rw
0x2013	Vehicle system	UNS8	0	ro
0x2014	Function	UNS8	145	ro
0x2015	Function Instance	UNS8	0...31 (default: 0)	rw
0x2016	ECU Instance	UNS8	0...7 (default: 0)	rw
0x2100	Filter type low pass filter	UNS16	0: inactive 1: Butterworth filter 2: critical damped (default)	rw
0x2101	Cut-Off-frequency low pass filter	UNS16	100...25000 mHz default: 5000 mHz	rw
0x2110	Sensor fusion enable	UNS8	0: Sensor fusion deactivated 1: Sensor fusion activated (default)	rw
0x2111	Sensor fusion suppression time	UNS16	100...10000 ms default: 5000 ms	rw
0x2120	Dynamic gyroscope offset correction	UNS8	0: inactive 1: active (default)	rw
0x2200	Zero offset x axis automatically	UNS8	Set x axis angle to zero 0: reset offset (absolute measurement) 1: zero (relative measurement)	wo
0x2201	Zero offset x axis	INT16	Zero offset x axis	rw
0x2202	Invert x axis	UNS8	0: x axis not inverted 1: x axis inverted	rw
0x2210	Zero offset y axis automatically	UNS8	Set y axis angle to zero 0: reset offset (absolute measurement) 1: zero (relative measurement)	wo
0x2211	Zero offset y axis	INT16	Zero offset y axis	rw
0x2212	Invert y axis	UNS8	0: y axis not inverted 1: y axis inverted	rw
0x2220	Gyro angle x axis read/write	INT16	-18000...17999 equals -180.00 to 179.99°	rw
0x2221	Gyro angle y axis read/write	INT16	-18000...17999 equals -180.00 to 179.99°	rw
0x2222	Gyro angle z axis read/write	INT16	-18000...17999	rw

Index	Parameter	Data type	Value	Access
			equals -180.00 to 179.99°	
0x2223	Reset gyro angle	UNS8	Writing any value sets the gyro angles of all 3 axes to zero	wo
0x2300	Store parameters	VSTR	Write 'SAVE' (45564153h) to store parameters permanently	wo
0x2301	Load parameters	VSTR	Write 'LOAD' (44414F4Ch) to load parameters from permanent memory	wo
0x2302	Reset to factory default parameters	VSTR	Write 'CLR' (524C43h) to apply factory default settings	wo
0x2303	Reset sensor	VSTR	Write 'RST' (545352h) to reset the device	wo
Configuration TxPGNs				
0x3000	TxPGN1 cycle time PGN 61459 Slope Sensor Information	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x3001	TxPGN1 priority PGN 61459 Slope Sensor Information	UNS8	0...7 (default: 3)	rw
0x3010	TxPGN2 cycle time PGN 61481 Slope Sensor Information 2	UNS16	0: deactivated 10...10000 ms cycle time default: 10 ms	rw
0x3011	TxPGN2 priority PGN 61481 Slope Sensor Information 2	UNS8	0...7 (default: 3)	rw
0x3020	TxPGN3 cycle time PGN 61482 Angular Rate Information	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x3021	TxPGN3 priority PGN 61482 Angular Rate Information	UNS8	0...7 (default: 3)	rw
0x3030	TxPGN4 cycle time PGN 61485 Acceleration Sensor	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x3031	TxPGN4 priority PGN 61485 Acceleration Sensor	UNS8	0...7 (default: 3)	rw
0x3040	TxPGN5 cycle time PGN 65280 (default: Perpendicular Angle)	UNS16	0: deactivated 10...10000 ms cycle time default: 10 ms	rw
0x3041	TxPGN5 priority PGN 65280 (default: Perpendicular Angle)	UNS8	0...7 (default: 3)	rw
0x3042	TxPGN5 LSB PGN 65280 (default: Perpendicular Angle)	UNS8	0x00...0xFF default: 0x00	rw
0x3048	TxPGN5 Mapping PGN 65280	UNS32	0...26 per byte (default: 0x17160201)	rw
0x3050	TxPGN6 cycle time PGN 65281 (default: Euler-Angle)	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x3051	TxPGN6 priority PGN 65281 (default: Euler-Angle)	UNS8	0...7 (default: 3)	rw
0x3052	TxPGN6 LSB PGN 65281 (default: Euler-Angle)	UNS8	0x00...0xFF default: 0x01	rw
0x3058	TxPGN6 Mapping PGN 65281	UNS32	0...26 per Byte (default: 0x19180403)	rw
0x3060	TxPGN7 cycle time PGN 65282 (default: unused)	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw

Index	Parameter	Data type	Value	Access
0x3061	TxPGN7 priority PGN 65282 (default: unused)	UNS8	0...7 (default: 3)	rw
0x3062	TxPGN7 LSB PGN 65282 (default: unused)	UNS8	0x00...0xFF default: 0x02	rw
0x3068	TxPGN7 Mapping PGN 65282	UNS32	0...26 per Byte (default: 0x00000000)	rw
0x3070	TxPGN8 cycle time PGN 65283 (default: Acceleration x, y, z axis)	UNS8	0: deactivated (default) 10...10000 ms cycle time	rw
0x3071	TxPGN8 priority PGN 65283 (default: Acceleration x, y, z axis)	UNS8	0...7 (default: 3)	rw
0x3072	TxPGN8 LSB PGN 65283 (default: Acceleration x, y, z axis)	UNS8	0x00...0xFF default: 0x03	rw
0x3078	TxPGN8 Mapping PGN 65283	UNS32	0...26 per Byte (default: 0x000C0B0A)	rw
0x3080	TxPGN9 cycle time PGN 65284 (default: Angular Rate x, y, z axis)	UNS8	0: deactivated (default) 10...10000 ms cycle time	rw
0x3081	TxPGN9 priority PGN 65284 (default: Angular Rate x, y, z axis)	UNS8	0...7 (default: 3)	rw
0x3082	TxPGN9 LSB PGN 65284 (default: Angular Rate x, y, z axis)	UNS8	0x00...0xFF default: 0x04	rw
0x3088	TxPGN9 Mapping PGN 65284	UNS32	0...26 per Byte (default: 0x00121110)	rw
0x3090	XPGN10 cycle time PGN 65285 (default: Acceleration unfiltered x, y, z axis)	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x3091	TXPGN10 priority PGN 65285 (default: Acceleration unfiltered x, y, z axis)	UNS8	0...7 (default: 3)	rw
0x3092	TXPGN10 LSB PGN 65285 (default: Acceleration unfiltered x, y, z axis)	UNS8	0x00...0xFF default: 0x05	rw
0x3098	TxPGN10 Mapping PGN 65285	UNS32	0...26 per Byte (default: 0x000F0E0D)	rw
0x30A0	TXPGN11 cycle time PGN 65286 (default: unused)	UNS16	0: deactivated (default) 10...10000 ms cycle time	rw
0x30A1	TXPGN11 priority PGN 65286 (default: unused)	UNS8	0...7 (default: 3)	rw
0x30A2	TXPGN11 LSB PGN 65286 (default: unused)	UNS8	0x00...0xFF default: 0x06	rw
0x30A8	TxPGN11 Mapping PGN 65286	UNS32	0...26 per Byte (default: 0x00000000)	rw
Process data				
0x5000	Read angle values	UNS32	Angle output (according to TxPGN5)	ro
0x5001	Read temperature values	INT8	Temperature in °C	ro

Table 51: Configuration parameters

For permanent saving of the parameters, the "SAVE" command (Index 0x2300) must be sent. The CAN baud rate and device address are stored in the permanent memory during writing but are not immediately applied. A restart of the sensor is necessary to assume the new parameters.

10.5.1 Examples SAE J1939 communication

	CAN-Identifier	D0	D1	D2	D3	D4	D5	D6	D7
		INDEX		CMD	STATUS	DATA0	DATA1	DATA2	DATA3
Request	0xOCEF8001	0x04	0x10	0x01	0x00	0x00	0x00	0x00	0x00
Reply	0xOCEF0180	0x04	0x10	0x01	0x00	0x01	0x00	0x00	0x00

Table 52: Read the firmware version of the sensor (device address 128)

	CAN-Identifier	D0	D1	D2	D3	D4	D5	D6	D7
		INDEX		CMD	STATUS	DATA0	DATA1	DATA2	DATA3
Request	0xOCEF8001	0x10	0x21	0x02	0x00	0x01	0x00	0x00	0x00
Reply	0xOCEF0180	0x10	0x21	0x02	0x00	0x01	0x00	0x00	0x00

Table 53: Activate sensor fusion (device address 128)

10.5.2 Status byte description

Value	Description
0x00	Ok, processing successfully
0xF0	invalid index
0xF1	invalid parameter, parameter out of range
0xF2	EEPROM read-/write-error

Table 54: Status byte

11 Maintenance and Service

11.1 Calibration

Every GEMAC MOTUS® Greenline XE is calibrated by the manufacturer GEMAC Chemnitz GmbH as standard before delivery.

Even the highest quality sensors have to be recalibrated at certain intervals in order to continue to deliver reliable, safe and error-free measurement results. We therefore recommend regular recalibration. This shall be done exclusively by the manufacturer GEMAC GmbH.

11.2 Customer service

11.2.1 Reshipment

Reshipment of the sensor GEMAC MOTUS® Greenline XE for calibration or repairing purposes must be executed in the original packaging or an equivalent packaging. Please indicate a short error description and your phone number for further inquiries.

11.2.2 Support

Please indicate the serial number and the firmware revision of your sensor for technical support.

Manufacturer: GEMAC Chemnitz GmbH

Zwickauer Str. 227

09116 Chemnitz

Tel.: +49 371 3377-0

Fax: +49 371 3377-272

Web: www.gemac-chemnitz.com

E-Mail: info@gemac-chemnitz.de

11.2.3 Warranty and limitation of liability

We will assume a warranty of 24 months for the sensor GEMAC MOTUS® Greenline XE, commencing from the date of delivery. Any repairs which are required during this time and fall under the manufacturer's obligation to give a warranty will be performed free of charge. Any damage resulting from improper use of the device or from exceeding of the specified technical parameters is not covered by the manufacturer's obligation to give a warranty.

GEMAC Chemnitz GmbH will only be liable for consequential damage resulting from use of the product in case of deliberate action or gross negligence on its own part.

The General Terms and Conditions of GEMAC Chemnitz GmbH apply.

12 Sensor configuration

12.1 Inclination sensor programming adapter

Use the separately available inclination sensor programming adapter (ISPA2 - PR-23999-10) to configure the sensor conveniently. The programming adapter is connected via USB to a PC. The connection of the sensors with the programming adapter is realized through the included CAN adapter cable. The sensor is supplied with power through the adapter. No additional voltage supply is necessary.

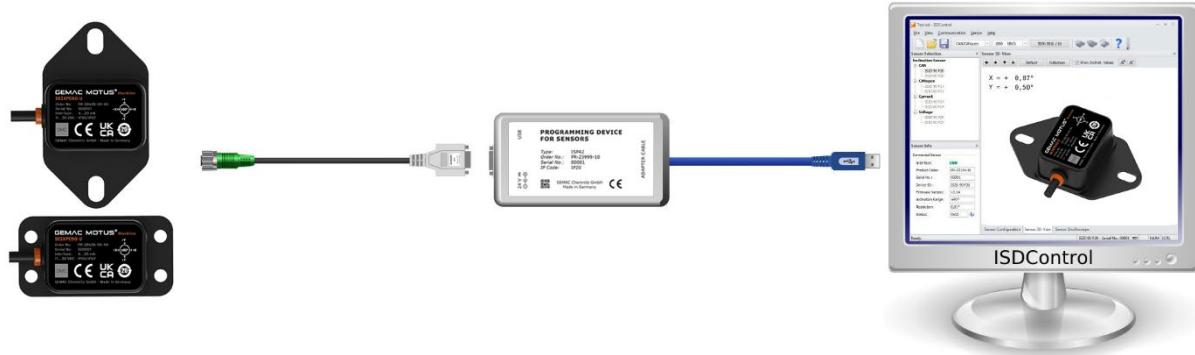


Figure 15: Sensor programming adapter

12.2 PC software ISDControl

The parametrization of all possible values is done with the PC software ISDControl, which is included in all sensor programming adapters. Each configuration can be stored in a file.

Properties:

- comfortable configuration of all parameters of the sensor
- 3D imaging and display of the current angle
- Oscilloscope display of the current angle for perpendicular angle
- Firmware Download option
- Automatic sensor search for unknown communication parameters



Figure 16: PC software

13 Ordering informationen

Article	Product type	Interface (default)	Hole pattern	Axes/measuring range
PR-28036-00-00	XE6XP360-C	CAN 2.0 A und B	4-hole	
PR-28026-00-00	XE6ZP360-C	CAN 2.0 A und B	2-hole	
PR-28136-00-00	XE6XP360-O	CANopen	4-hole	1-dimensional, ±180° (360°)
PR-28126-00-00	XE6ZP360-O	CANopen	2-hole	2-dimensional, ±90°
PR-28736-00-00	XE6XP360-J	SAE J1939	4-hole	
PR-28726-00-00	XE6ZP360-J	SAE J1939	2-hole	
PR-23999-10	ISPA2	Sensor programming adapter (including programming adapter, cables and PC software)		

Table 55: Ordering information